



zeta
f l o o r s

OAK-AB SERIES


ZETA F L O O R S

INNOVATION - QUALITY - ENVIRONMENT
WWW.ZETAFLORS.COM




OAK-AB SERIES FLOORING SCHEMATIC DIAGRAM



Two different patterns to minimize color or pattern repeat problem.
8 pcs repeat makes your floors more natural.

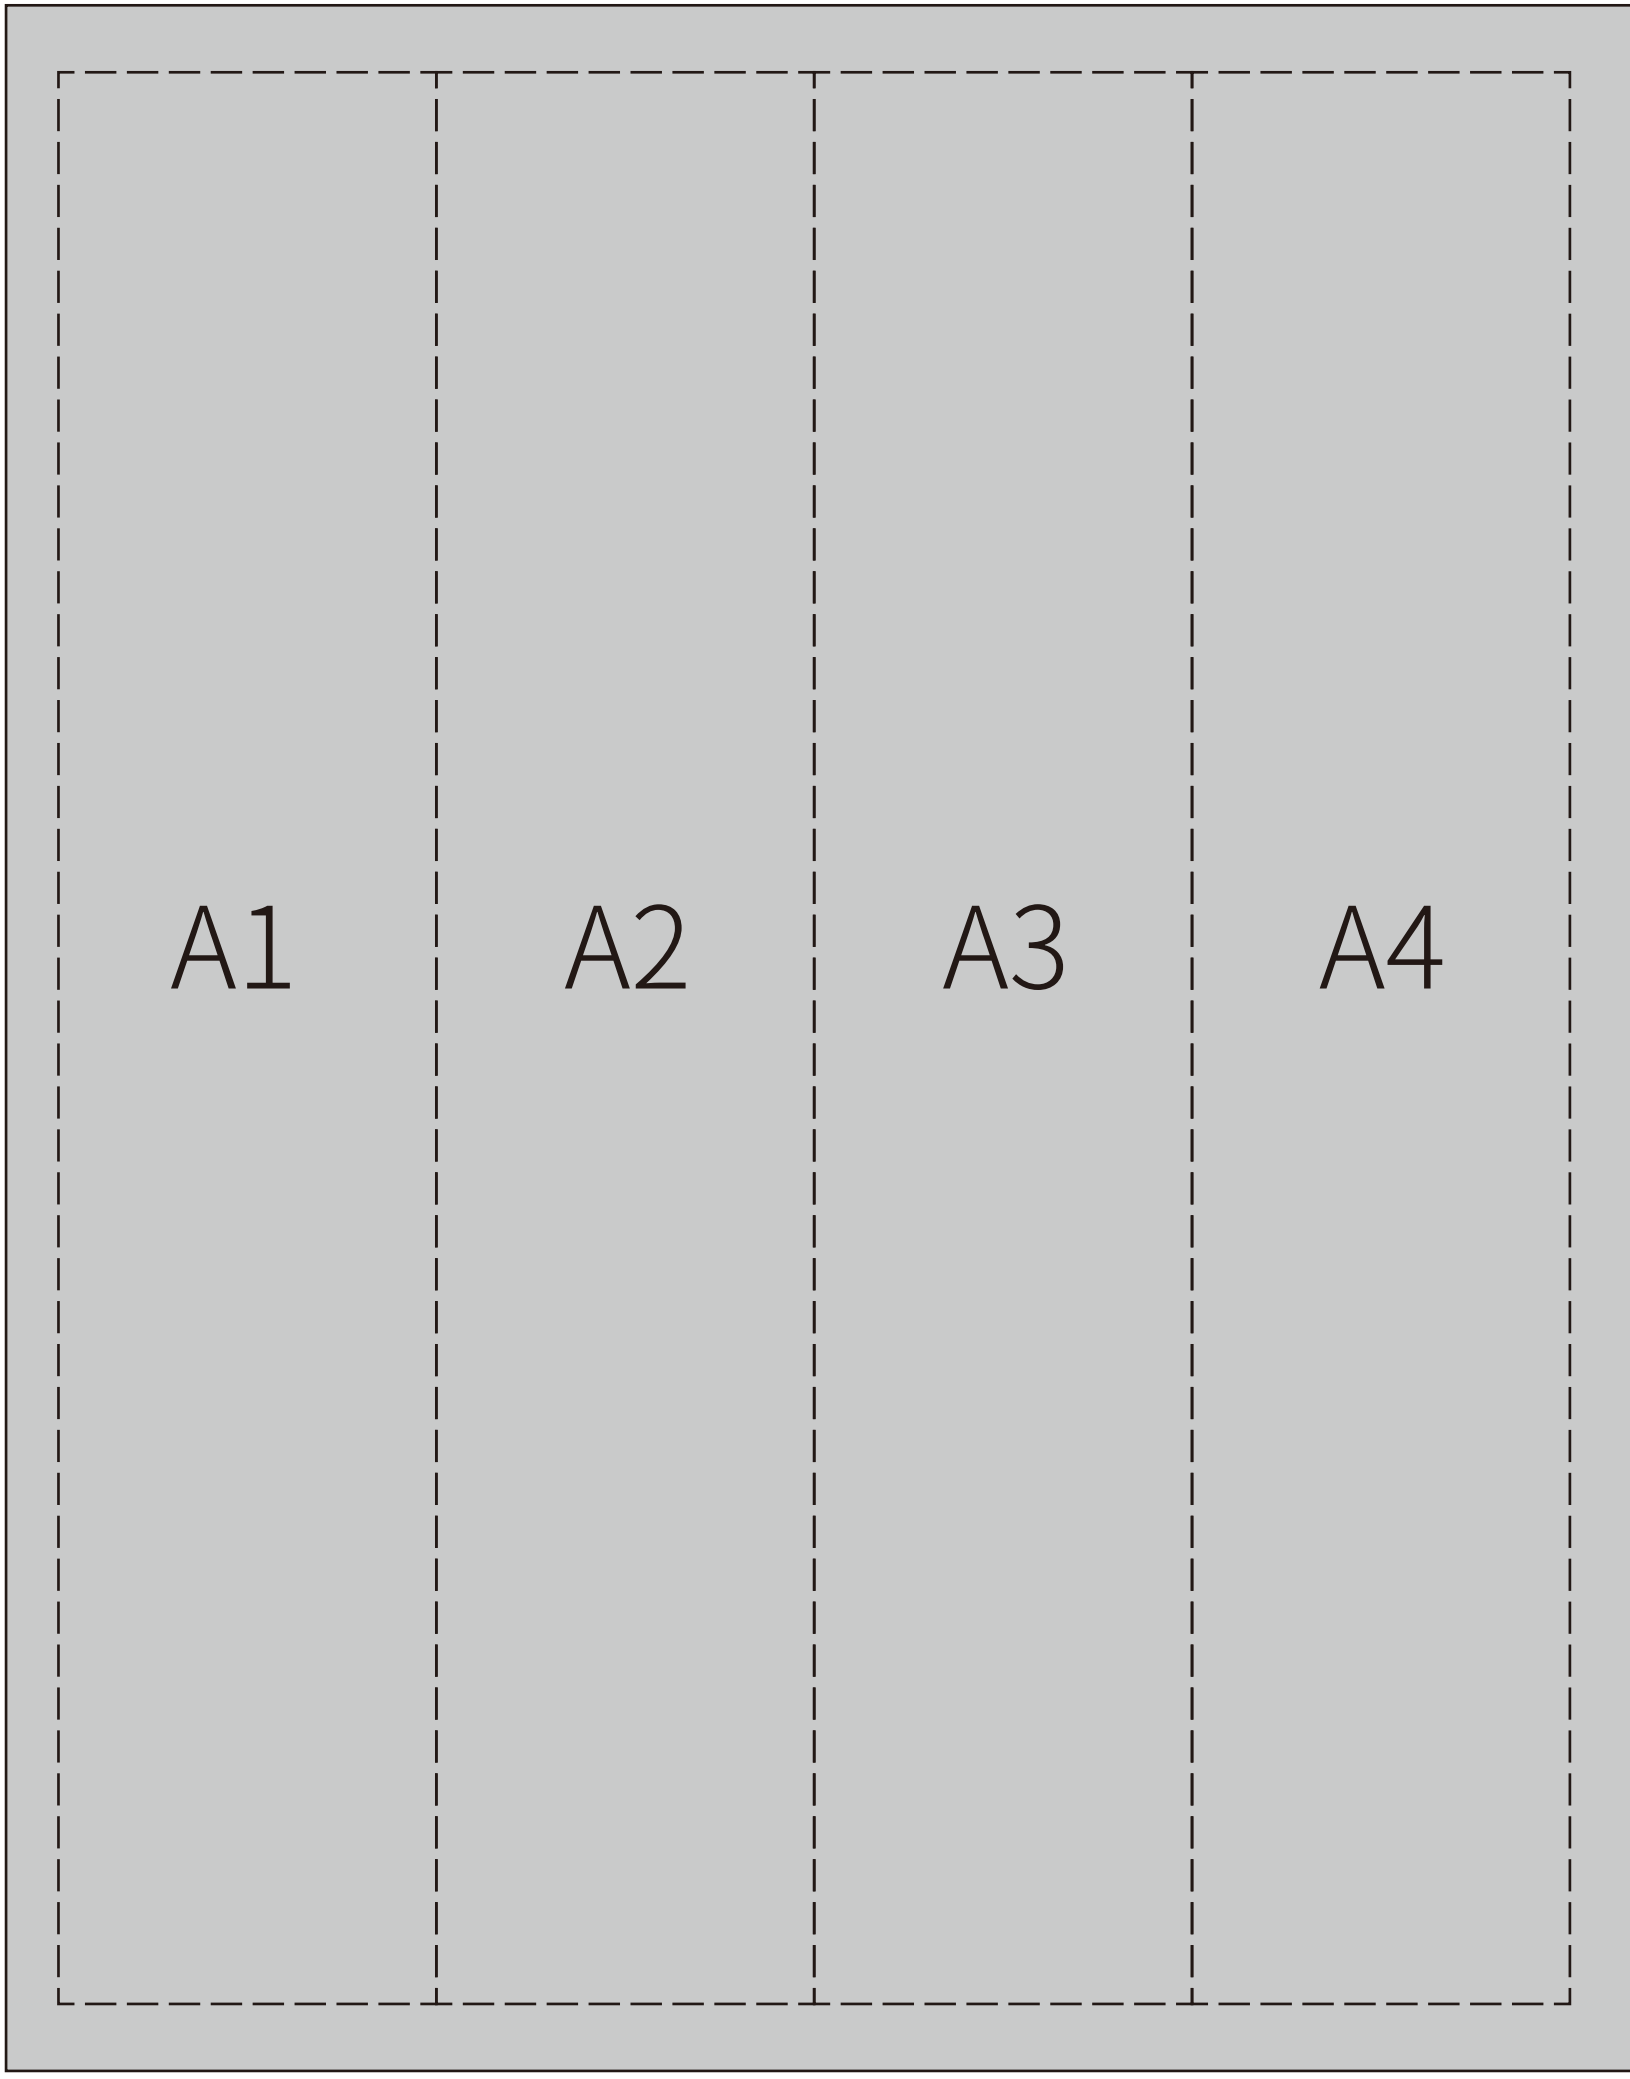

Floor A

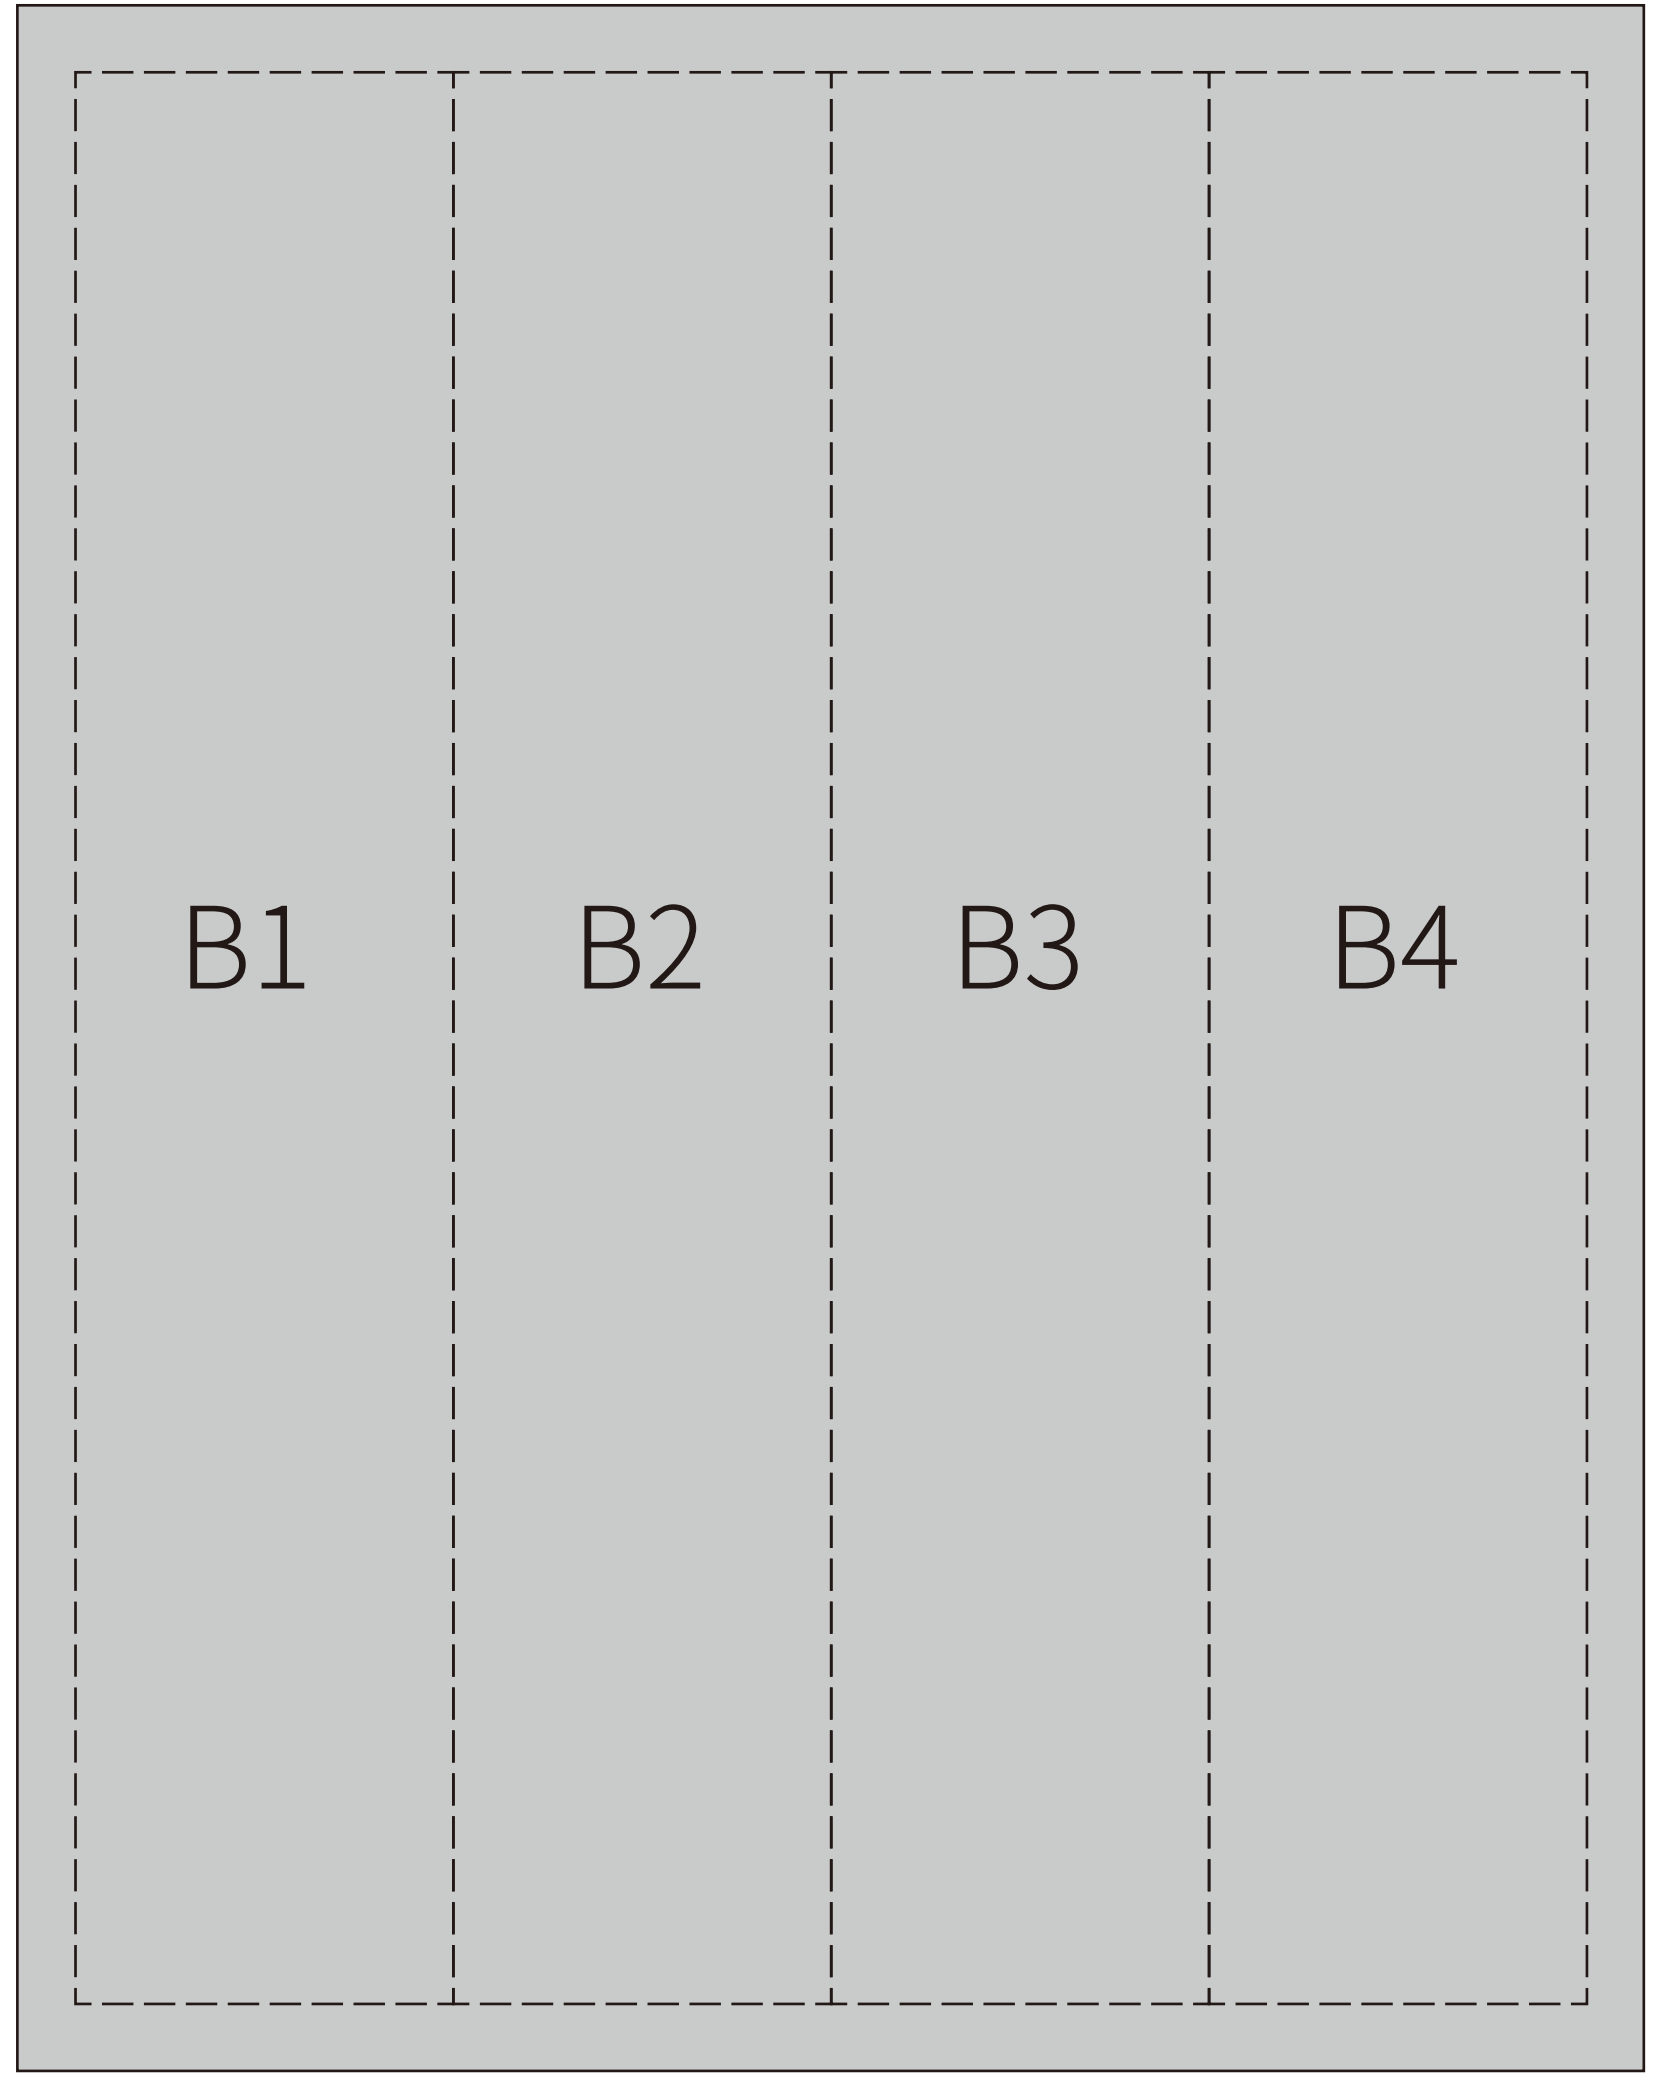

Floor B

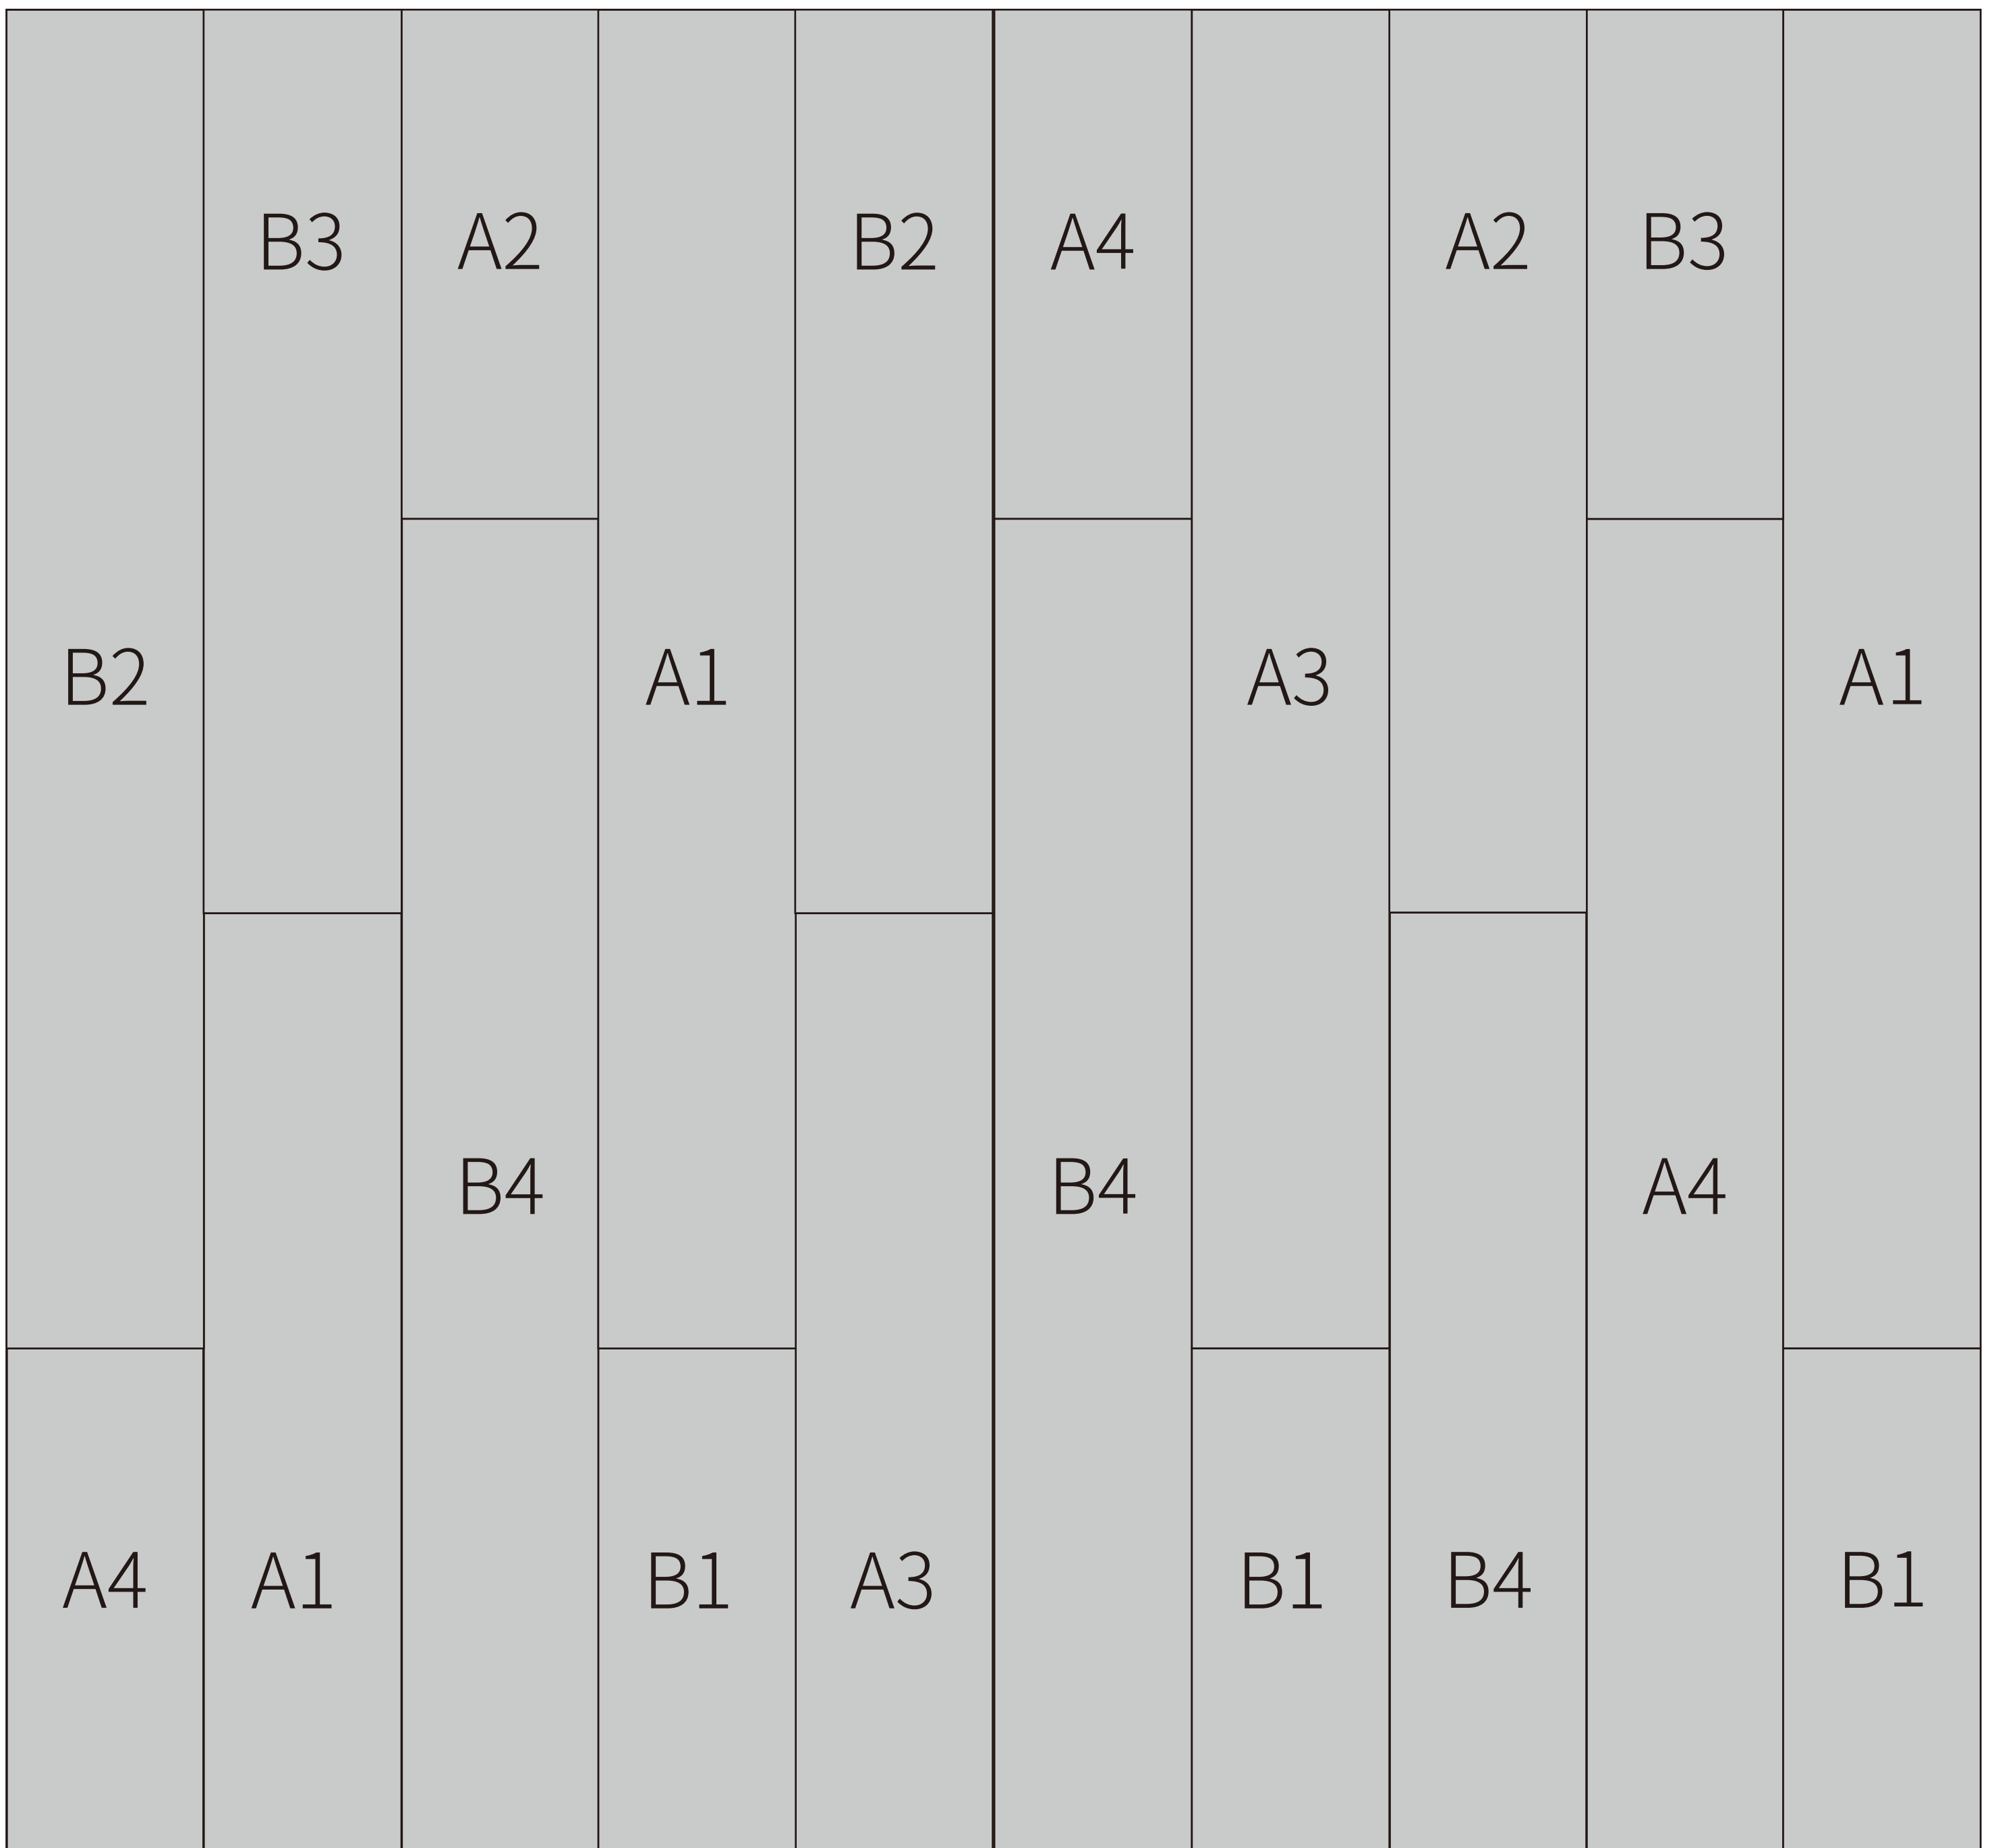



White thorn oak

NO.ZT33001

NO.ZT33002

Size: 984*1570mm

Flooring Size: 228*1524mm

Two different patterns to minimize color or pattern repeat problem. 8 pcs repeat makes your floors more natural.



ZT33001



ZT33001-1



ZT33001-2




ZT33001-3



ZT33001-4



ZT33002

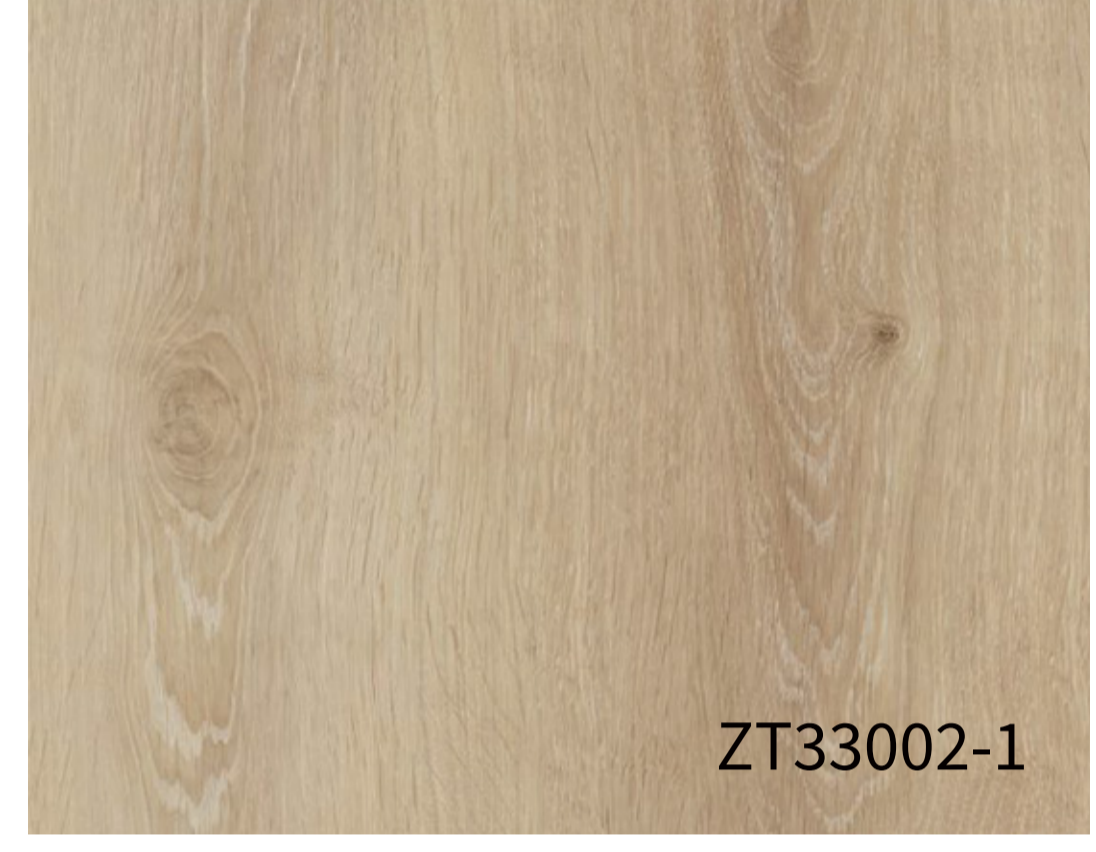

ZT33002-1





ZT33002-2




ZT33002-3



ZT33002-4

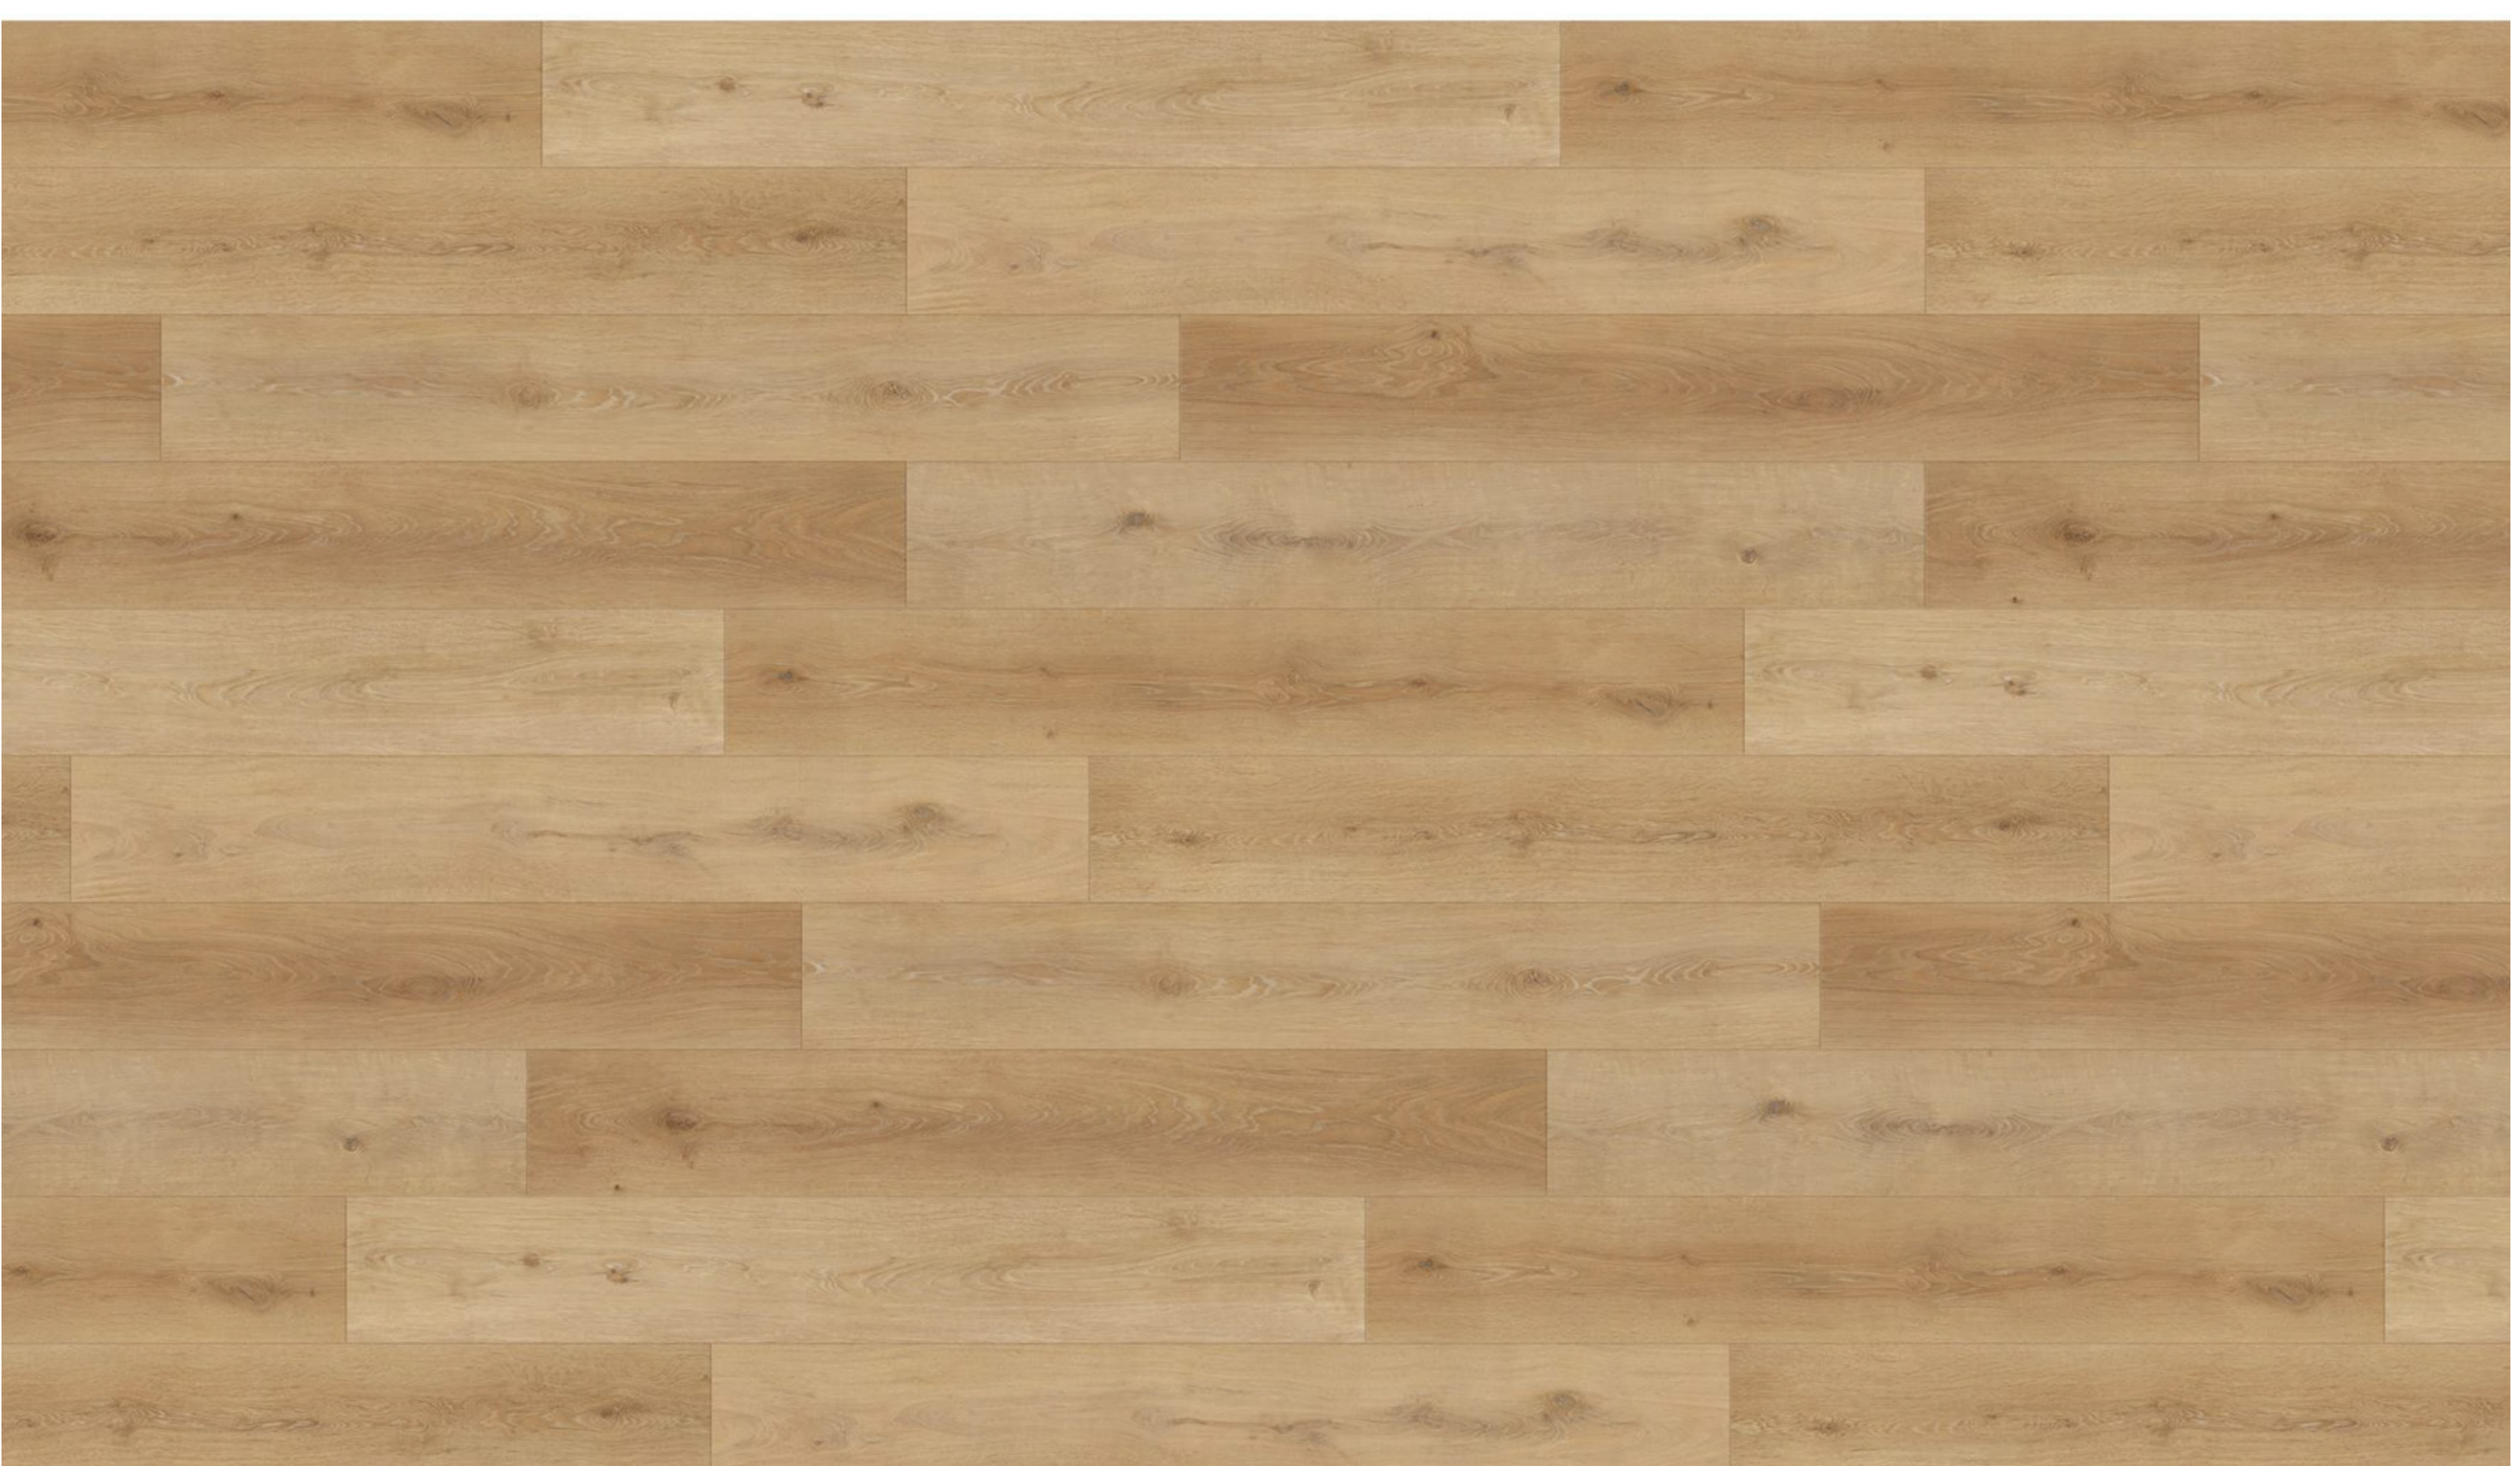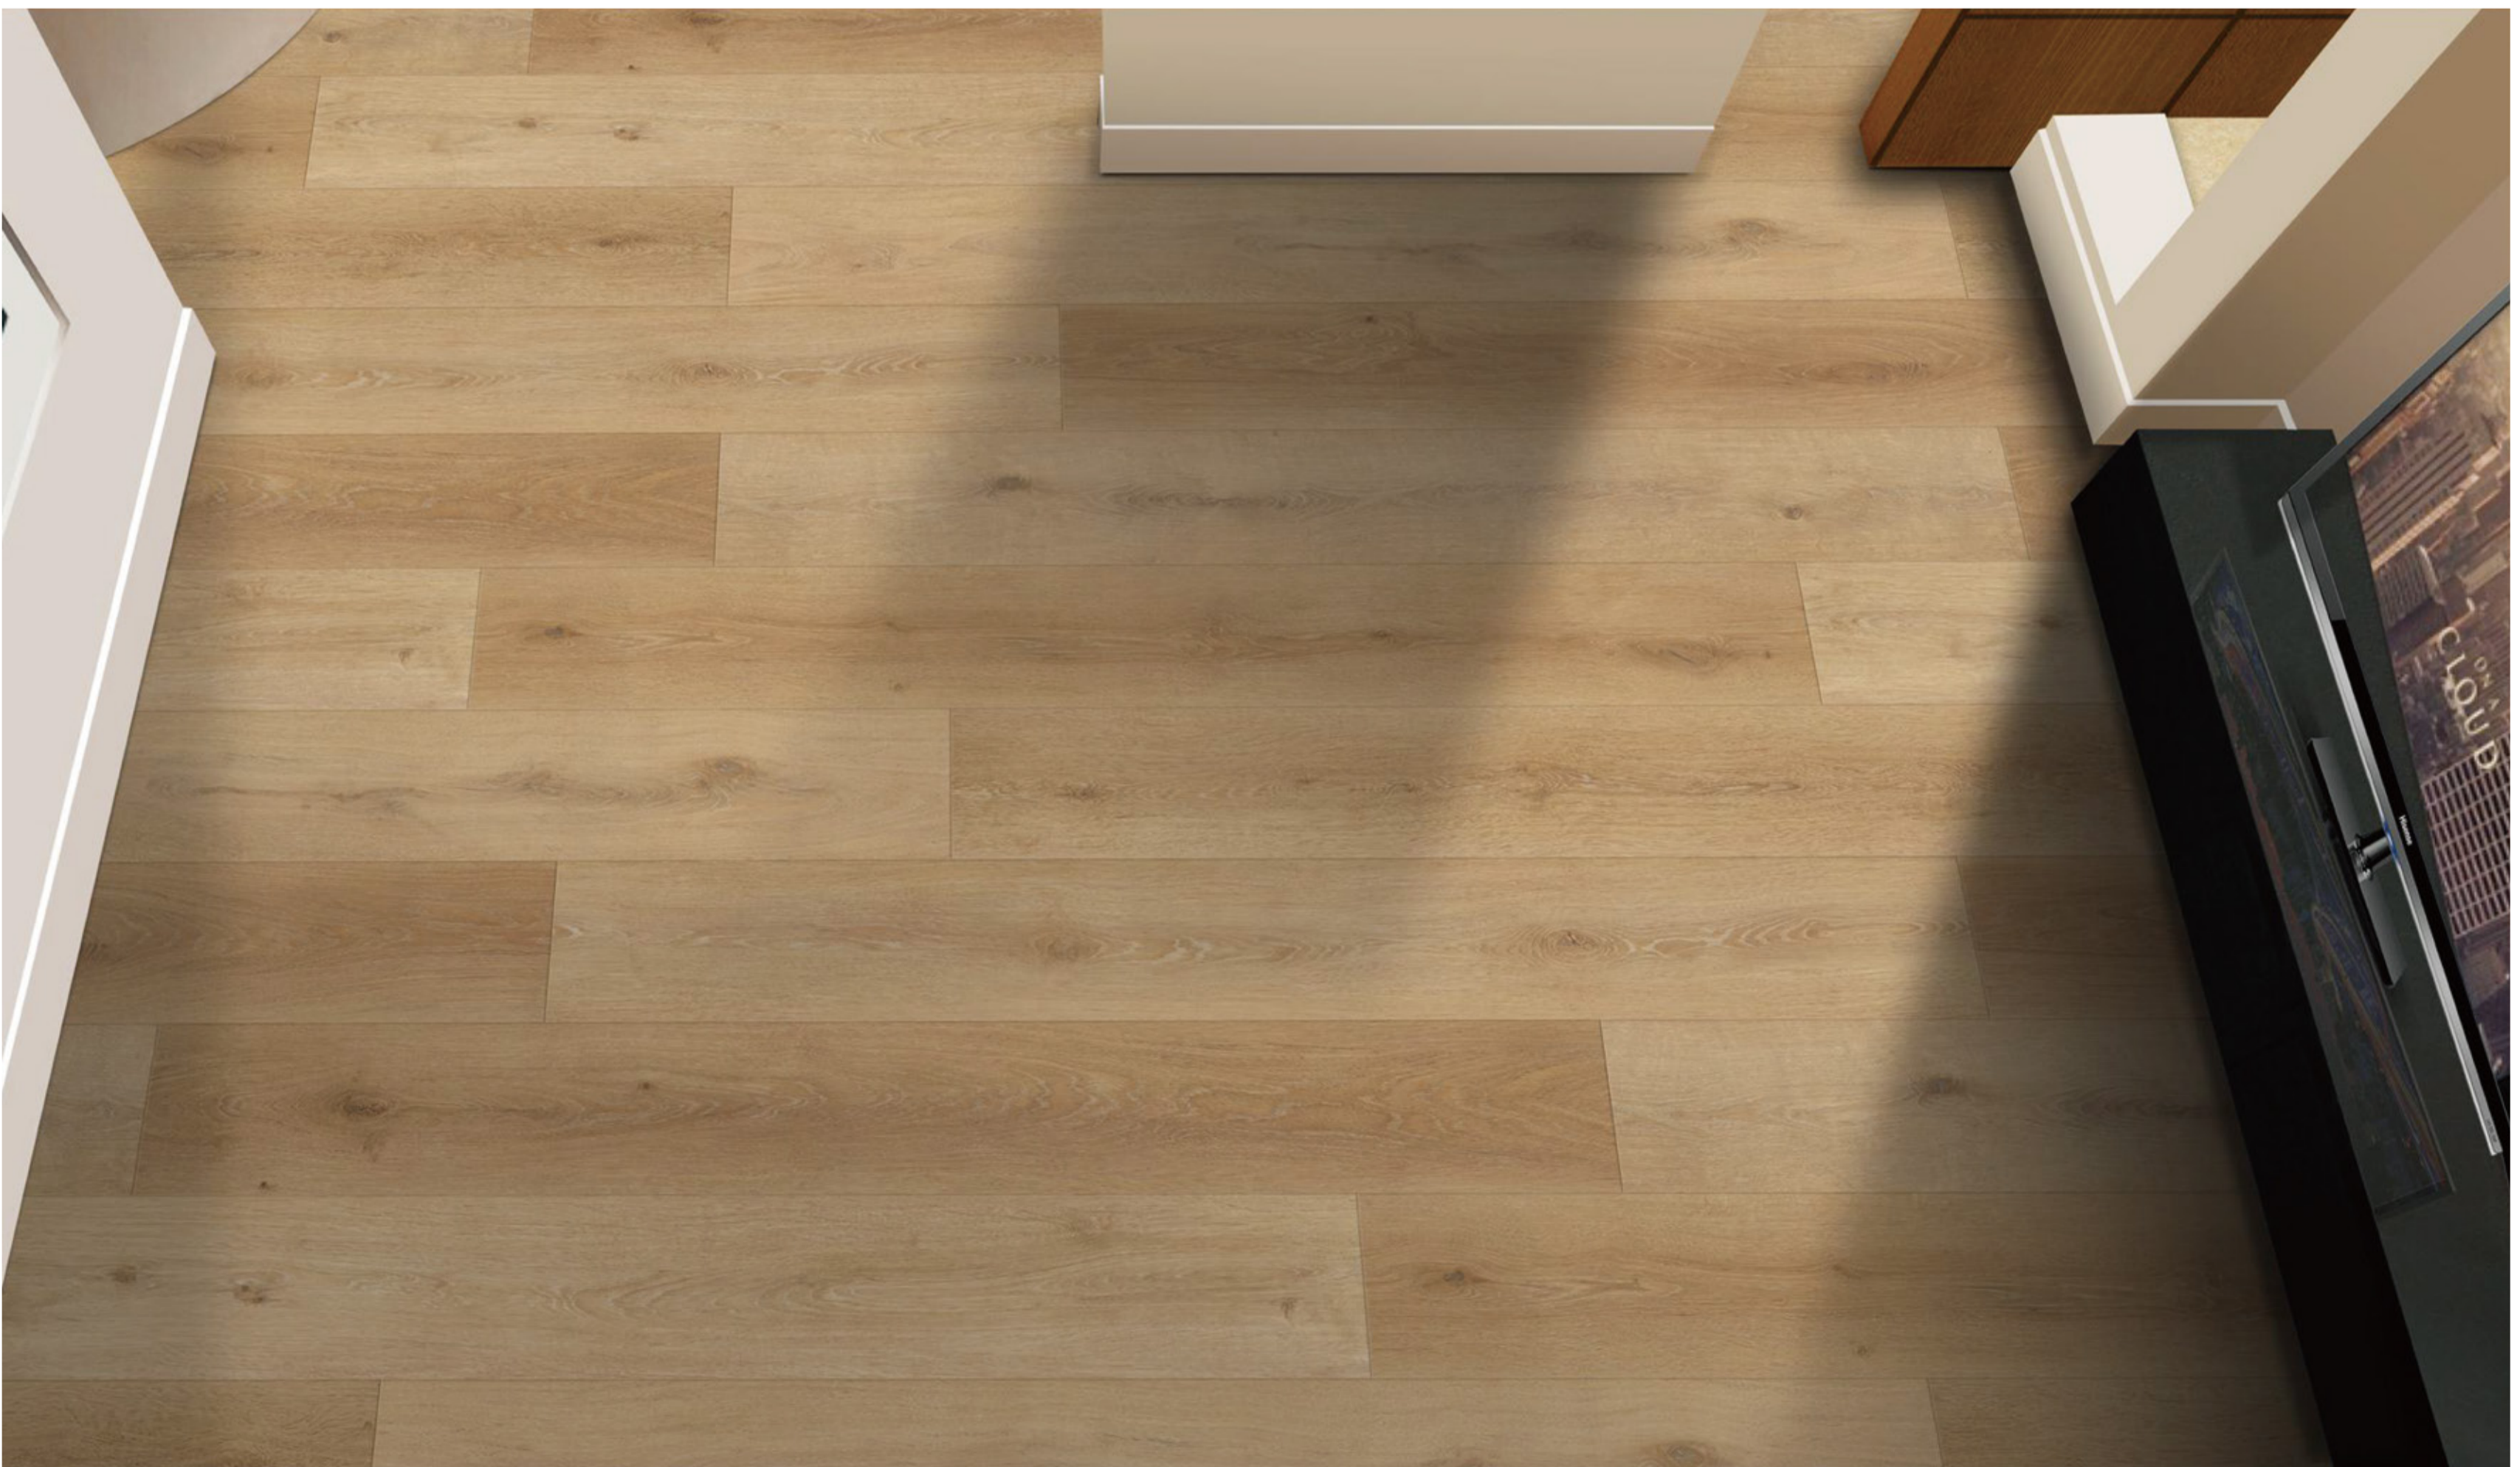

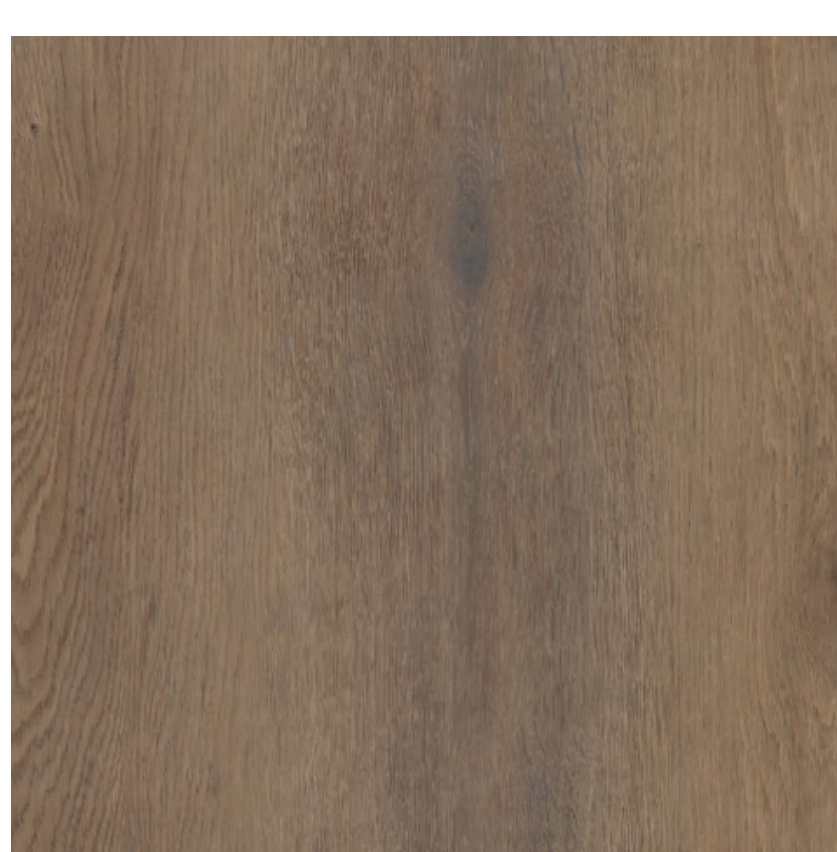

Black Ridge oak

NO.ZT33006

NO.ZT33007


Size: 984*1570mm

Flooring Size: 228*1524mm


Two different patterns to minimize color or pattern repeat problem. 8 pcs repeat makes your floors more natural.




ZT33006

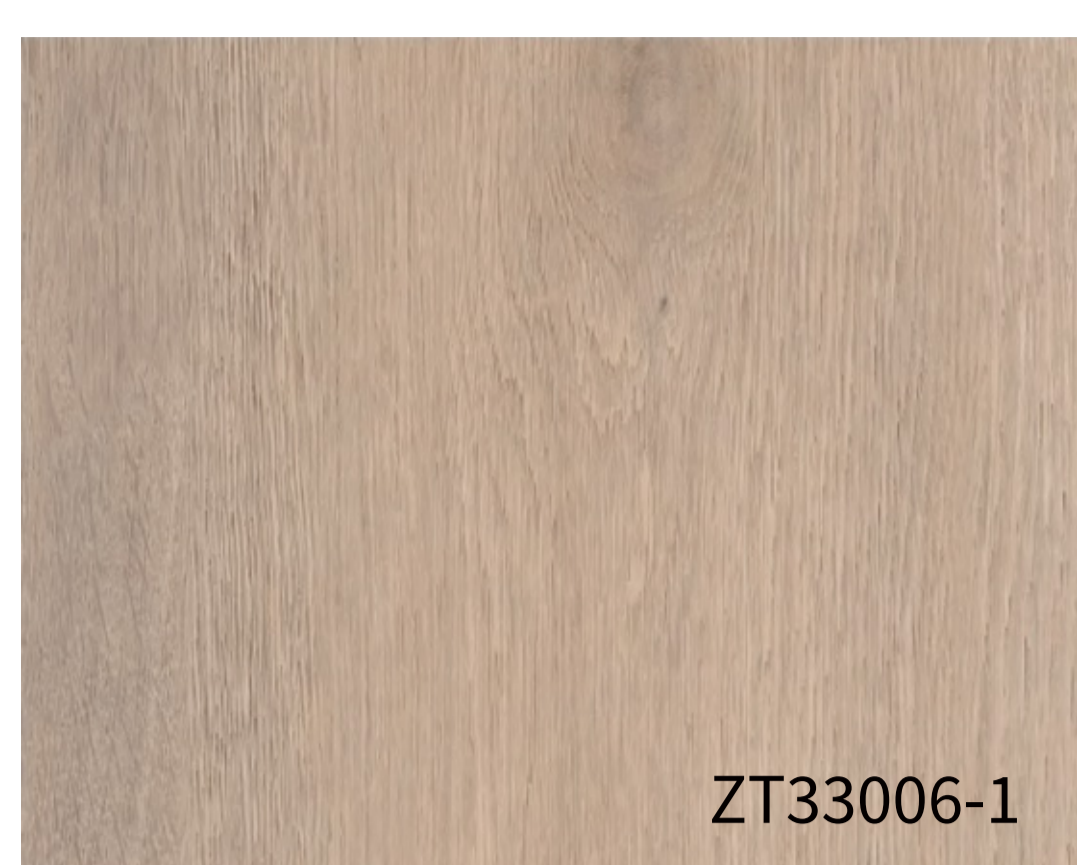


ZT33006-1

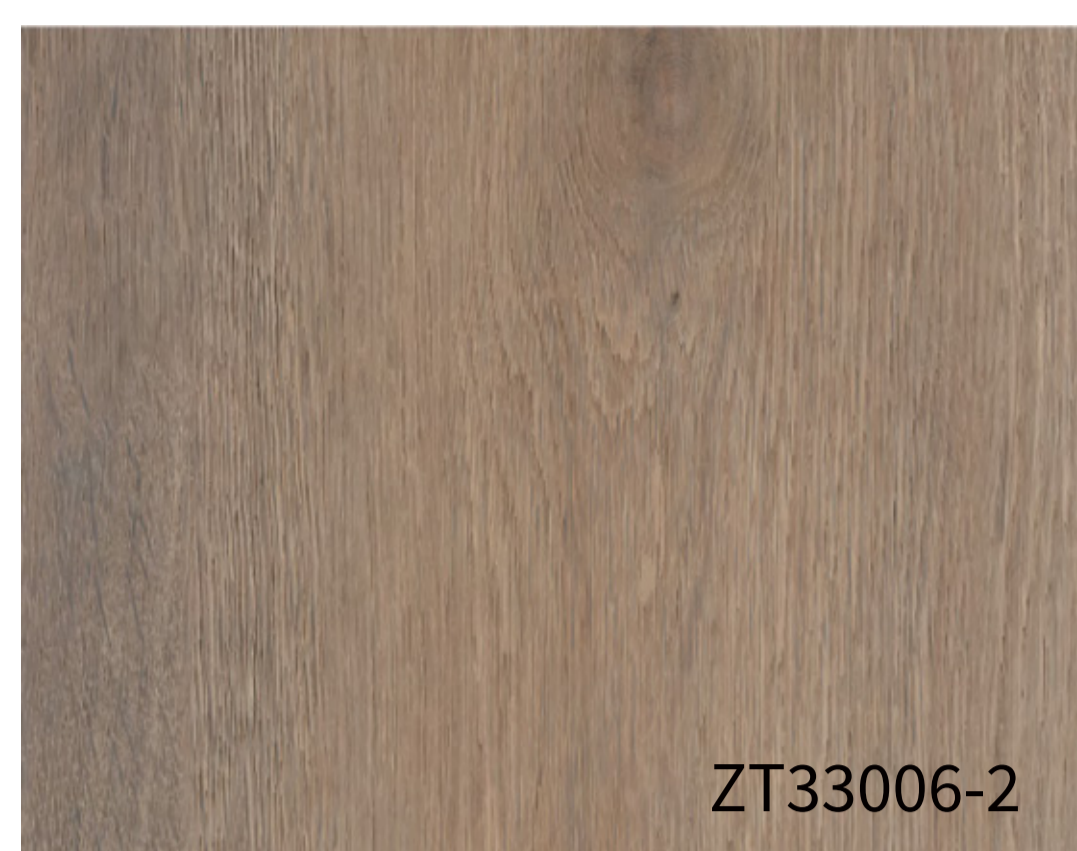

ZT33006-2

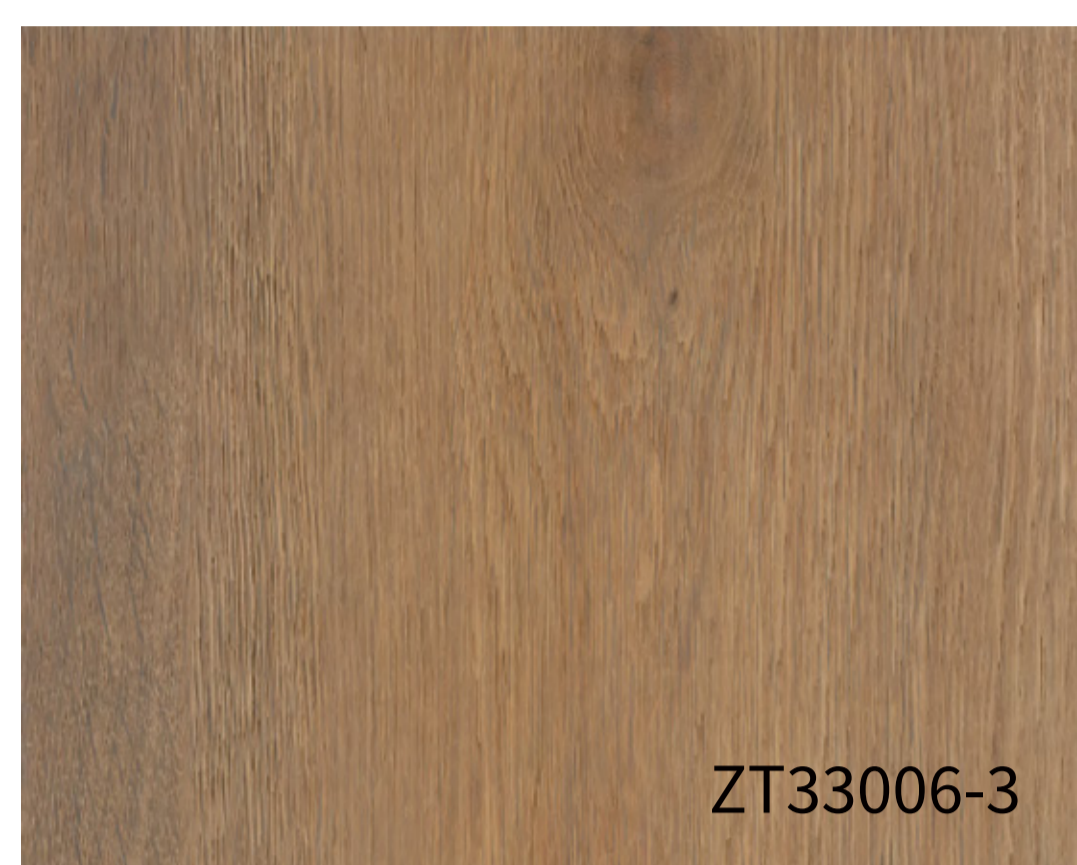

ZT33006-3

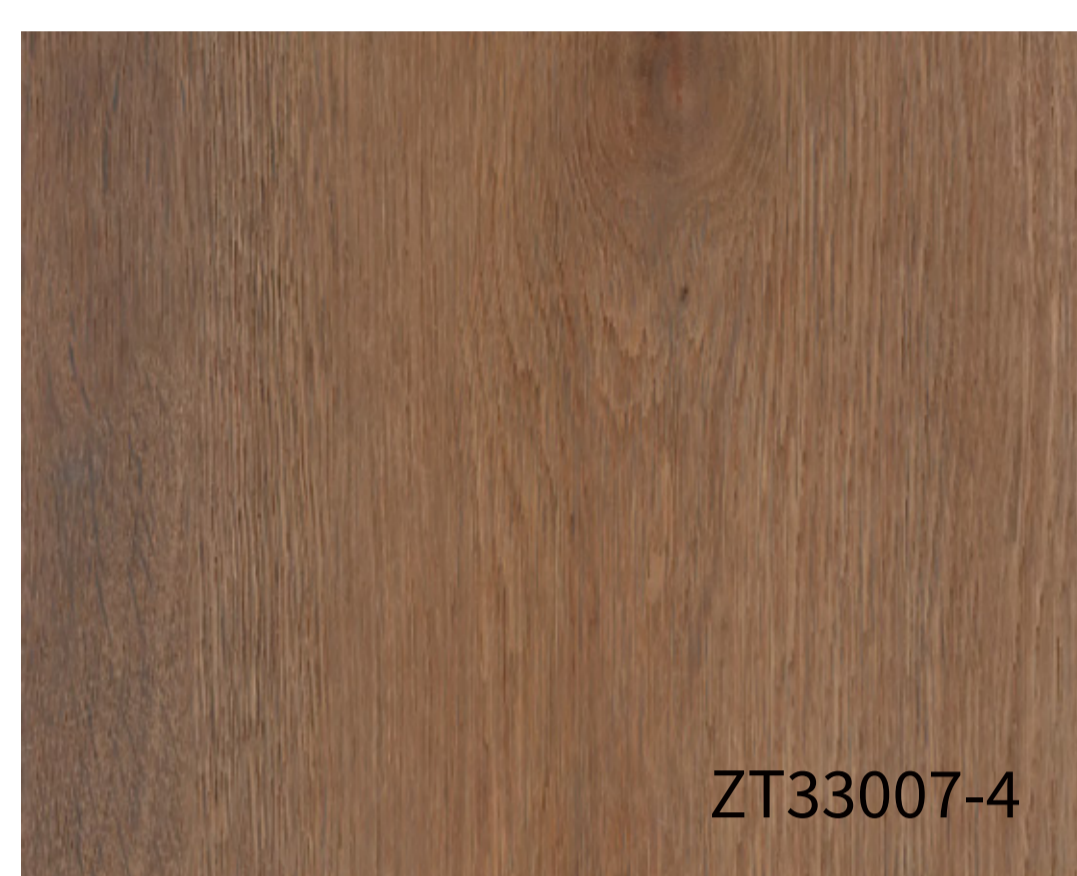


ZT33007-4




ZT33007




ZT33007-1

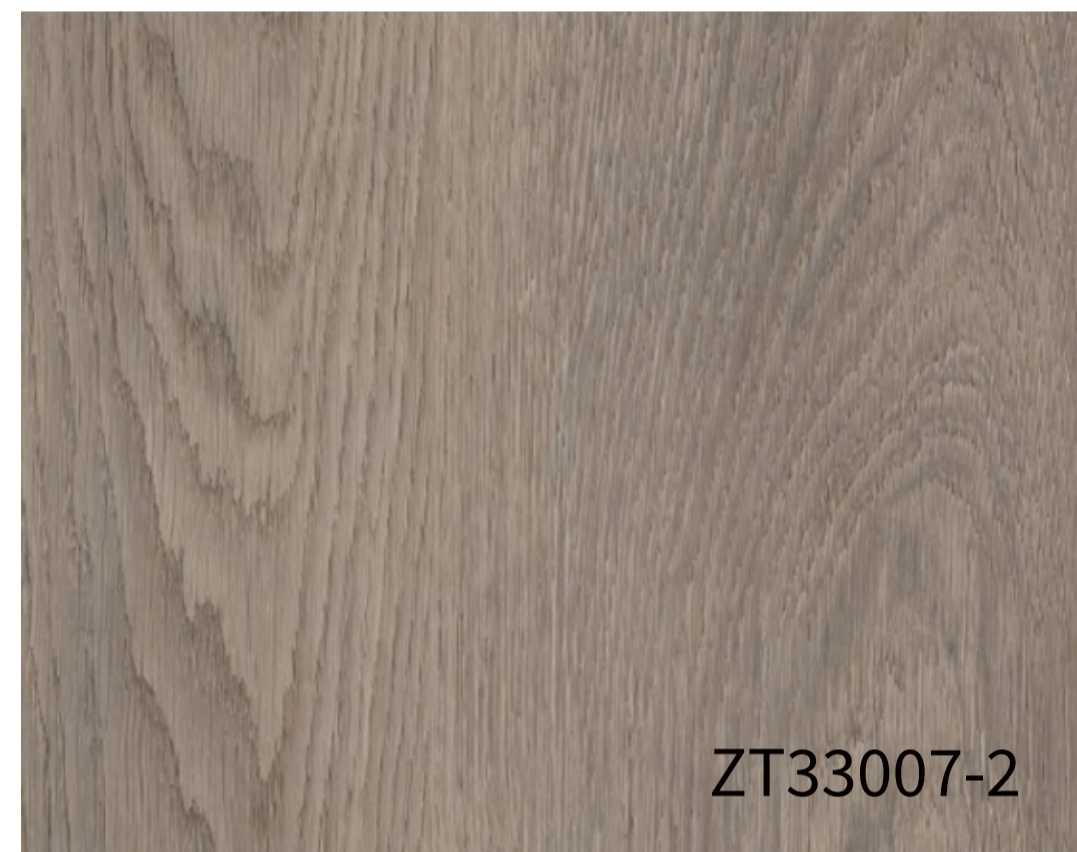

ZT33007-2

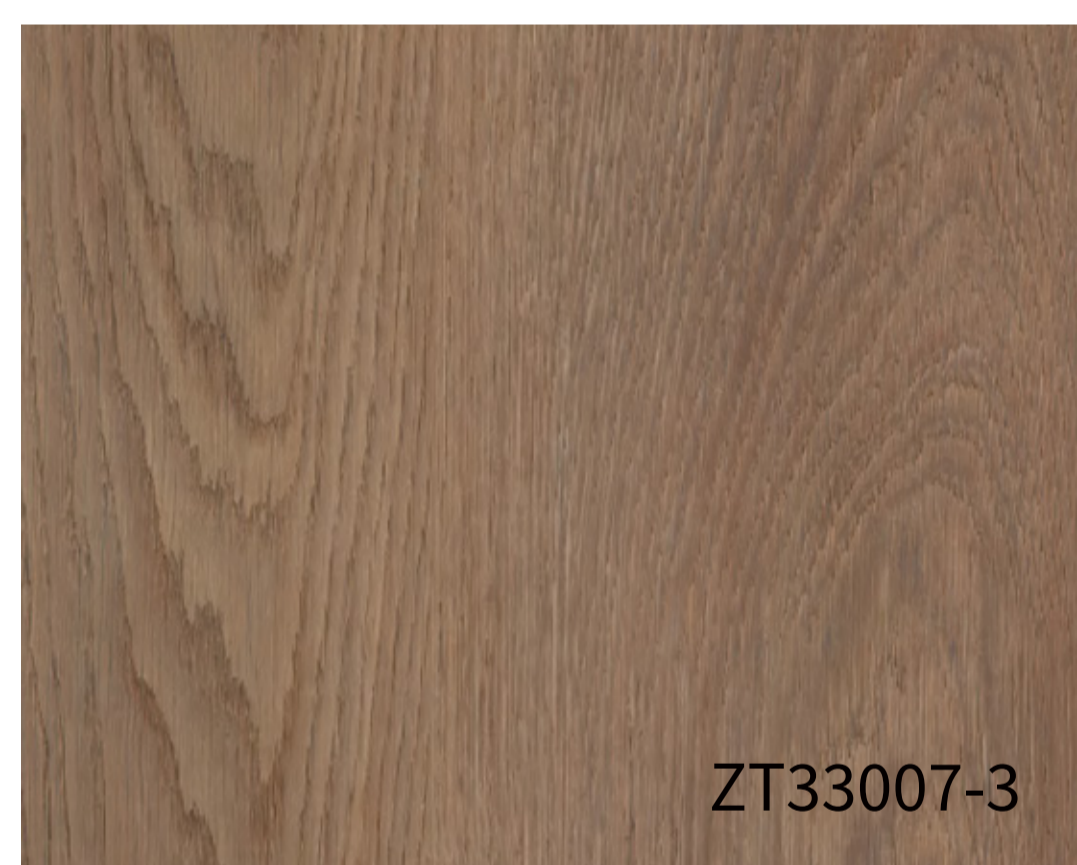

ZT33007-3

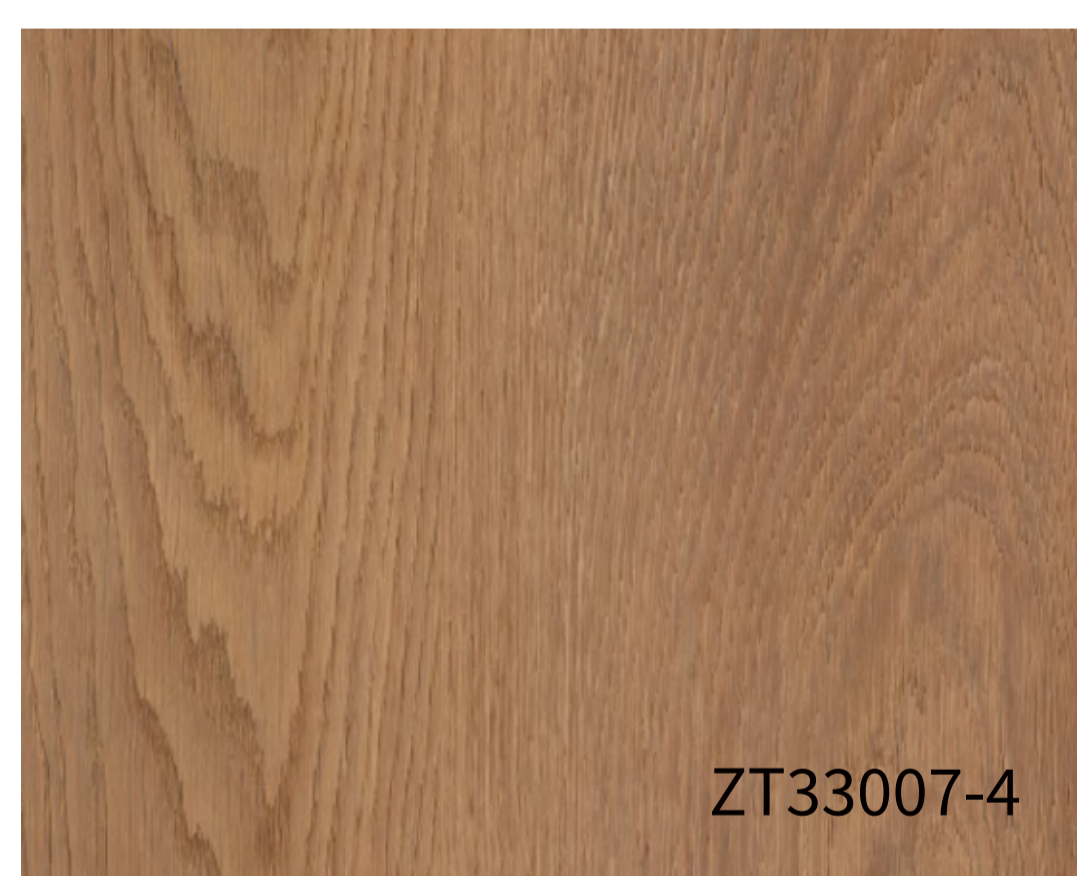


ZT33007-4






OAK-AB SERIES FLOORING SCHEMATIC DIAGRAM



Two different patterns to minimize color or pattern repeat problem.
10 pcs repeat makes your floors more natural.

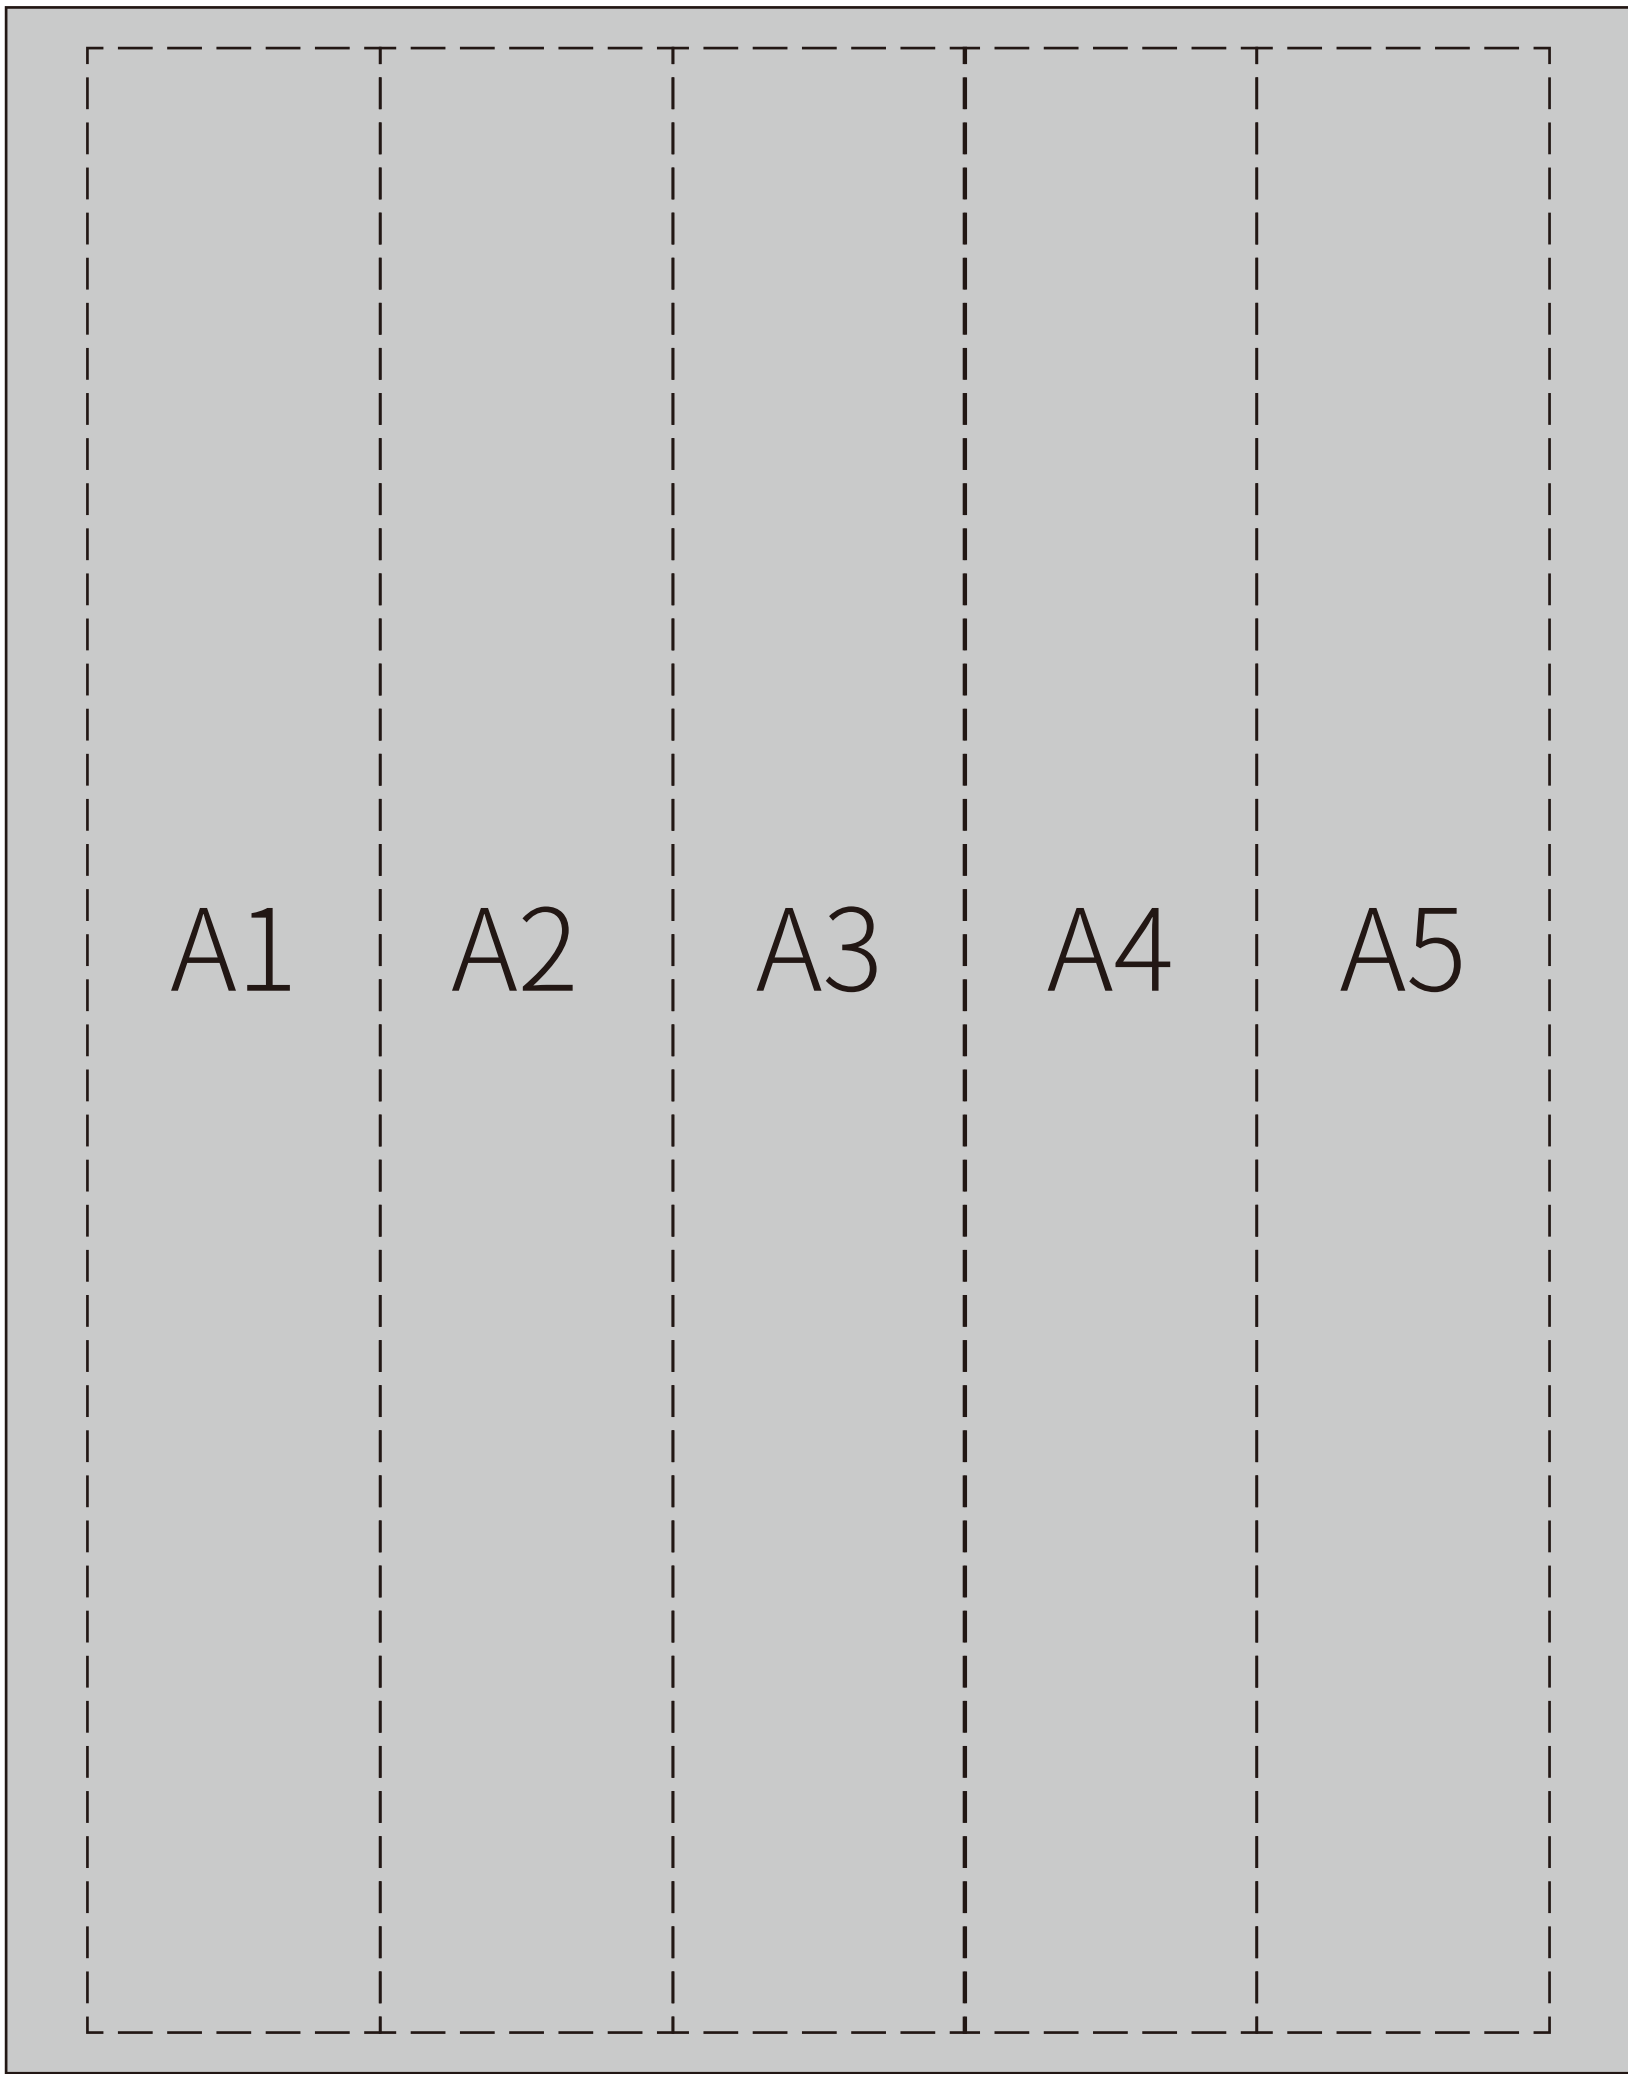


Floor A

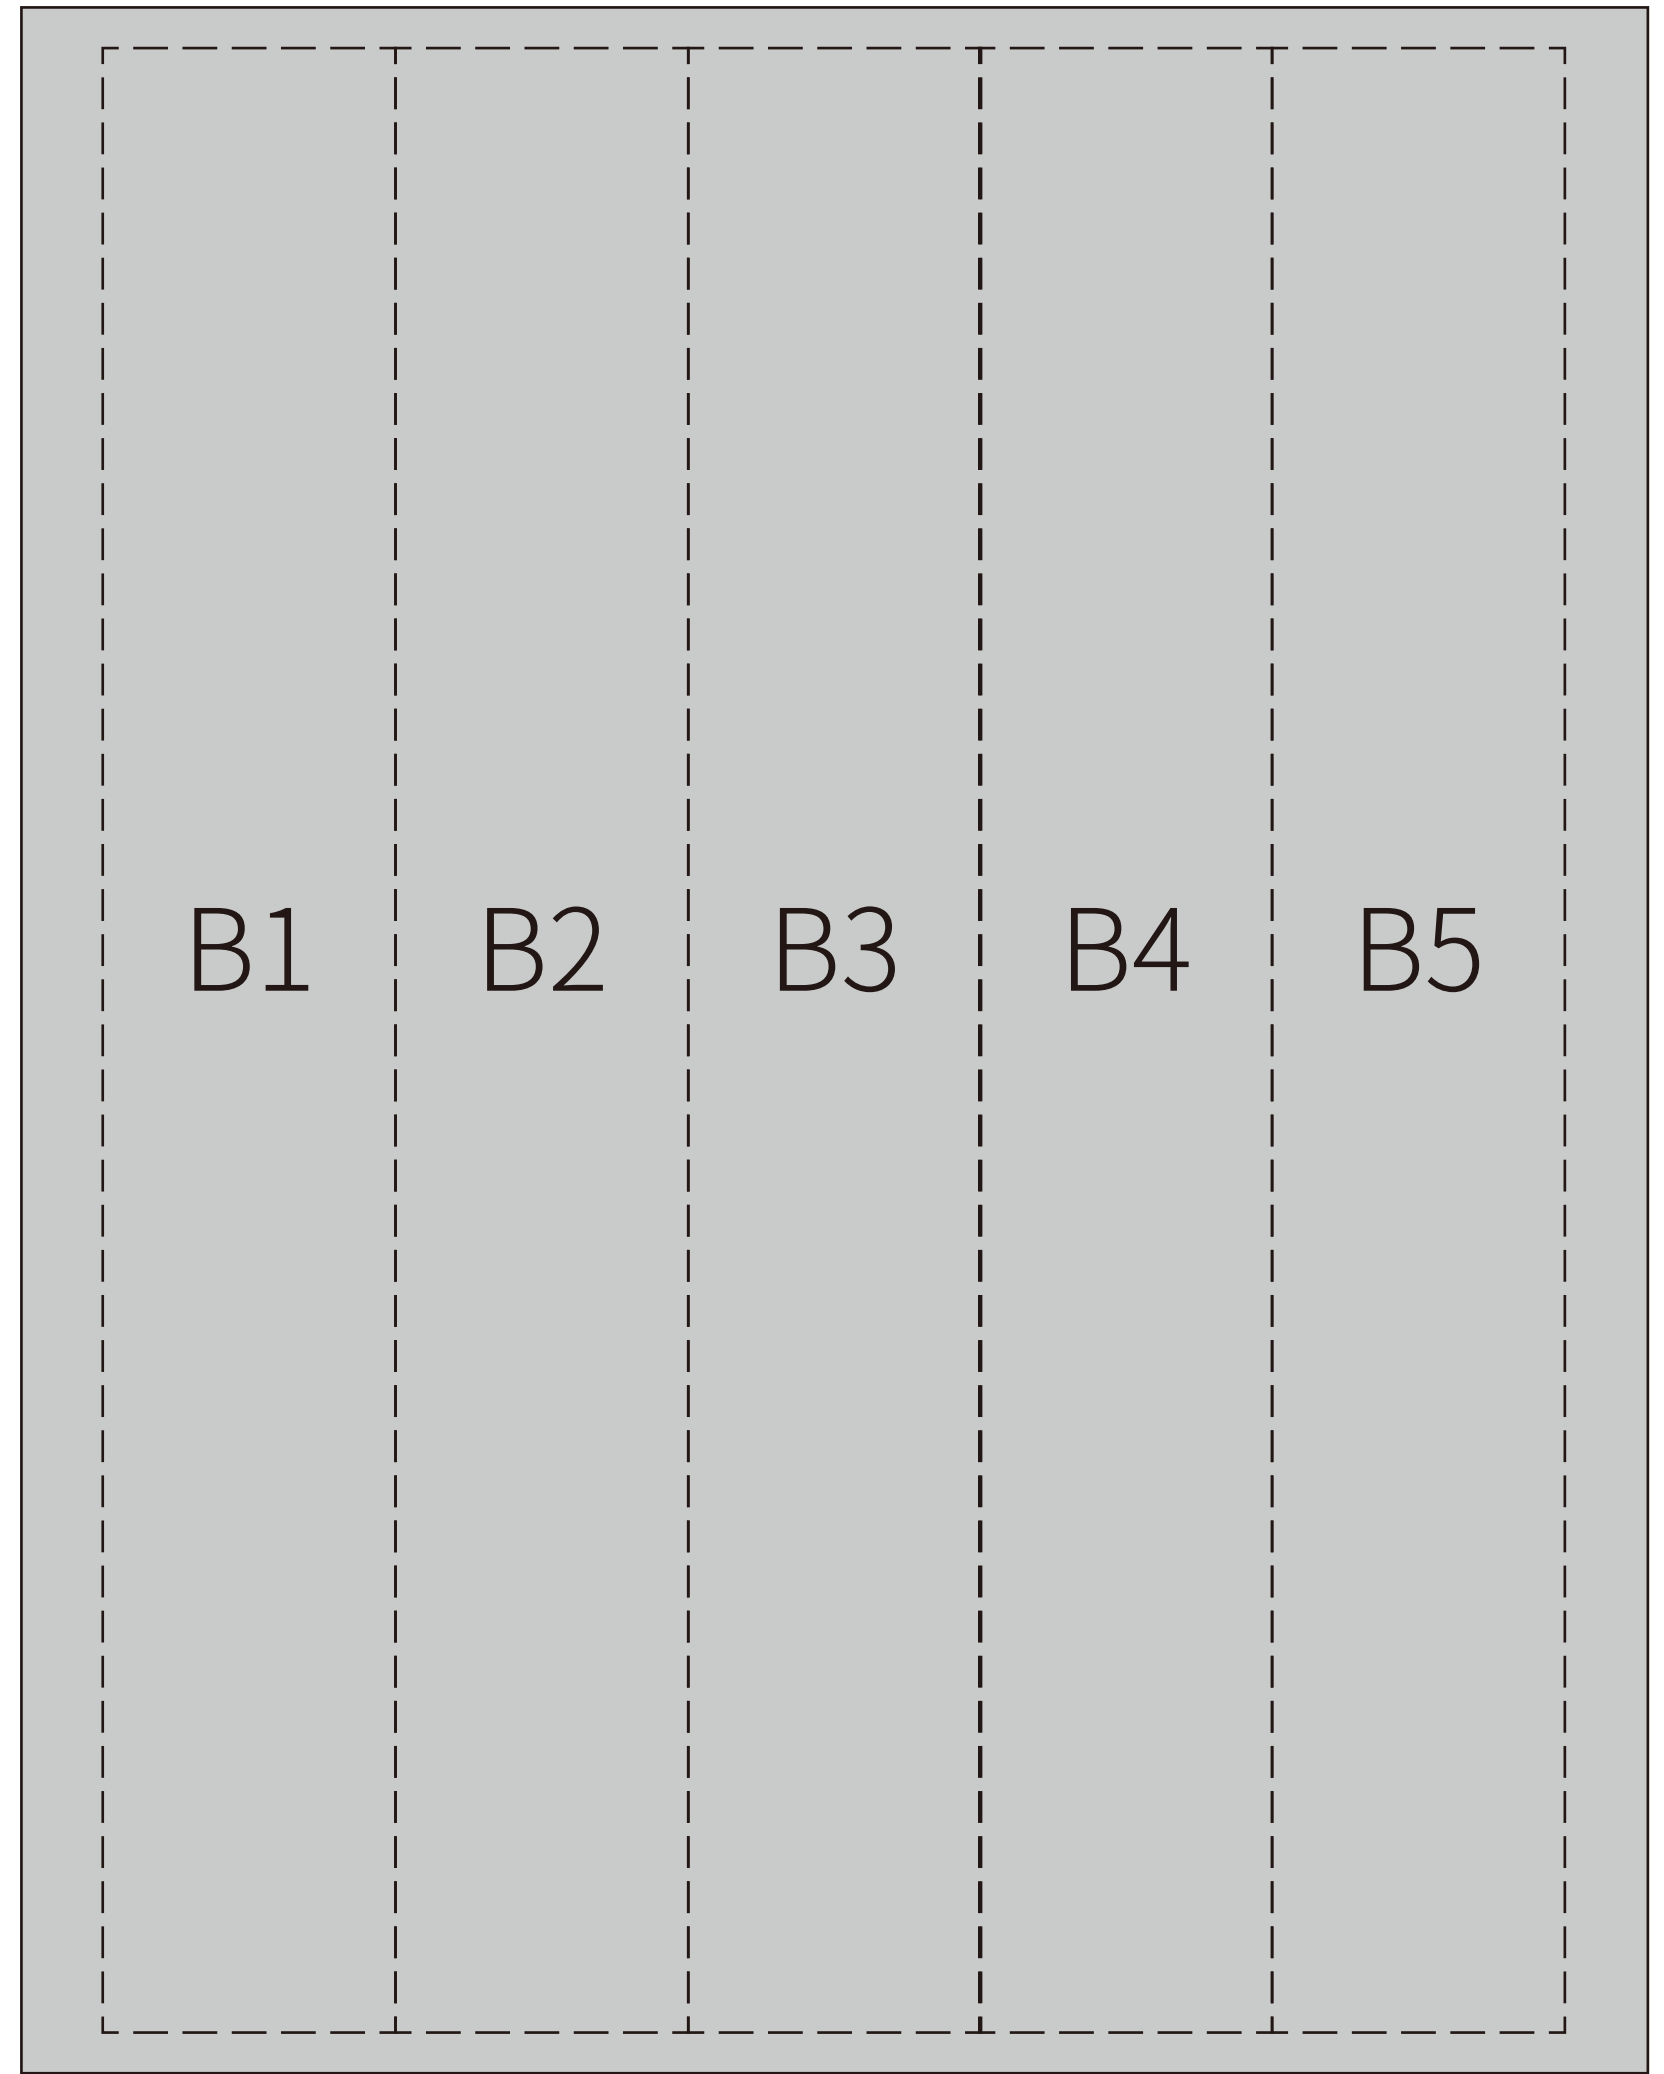

Floor B

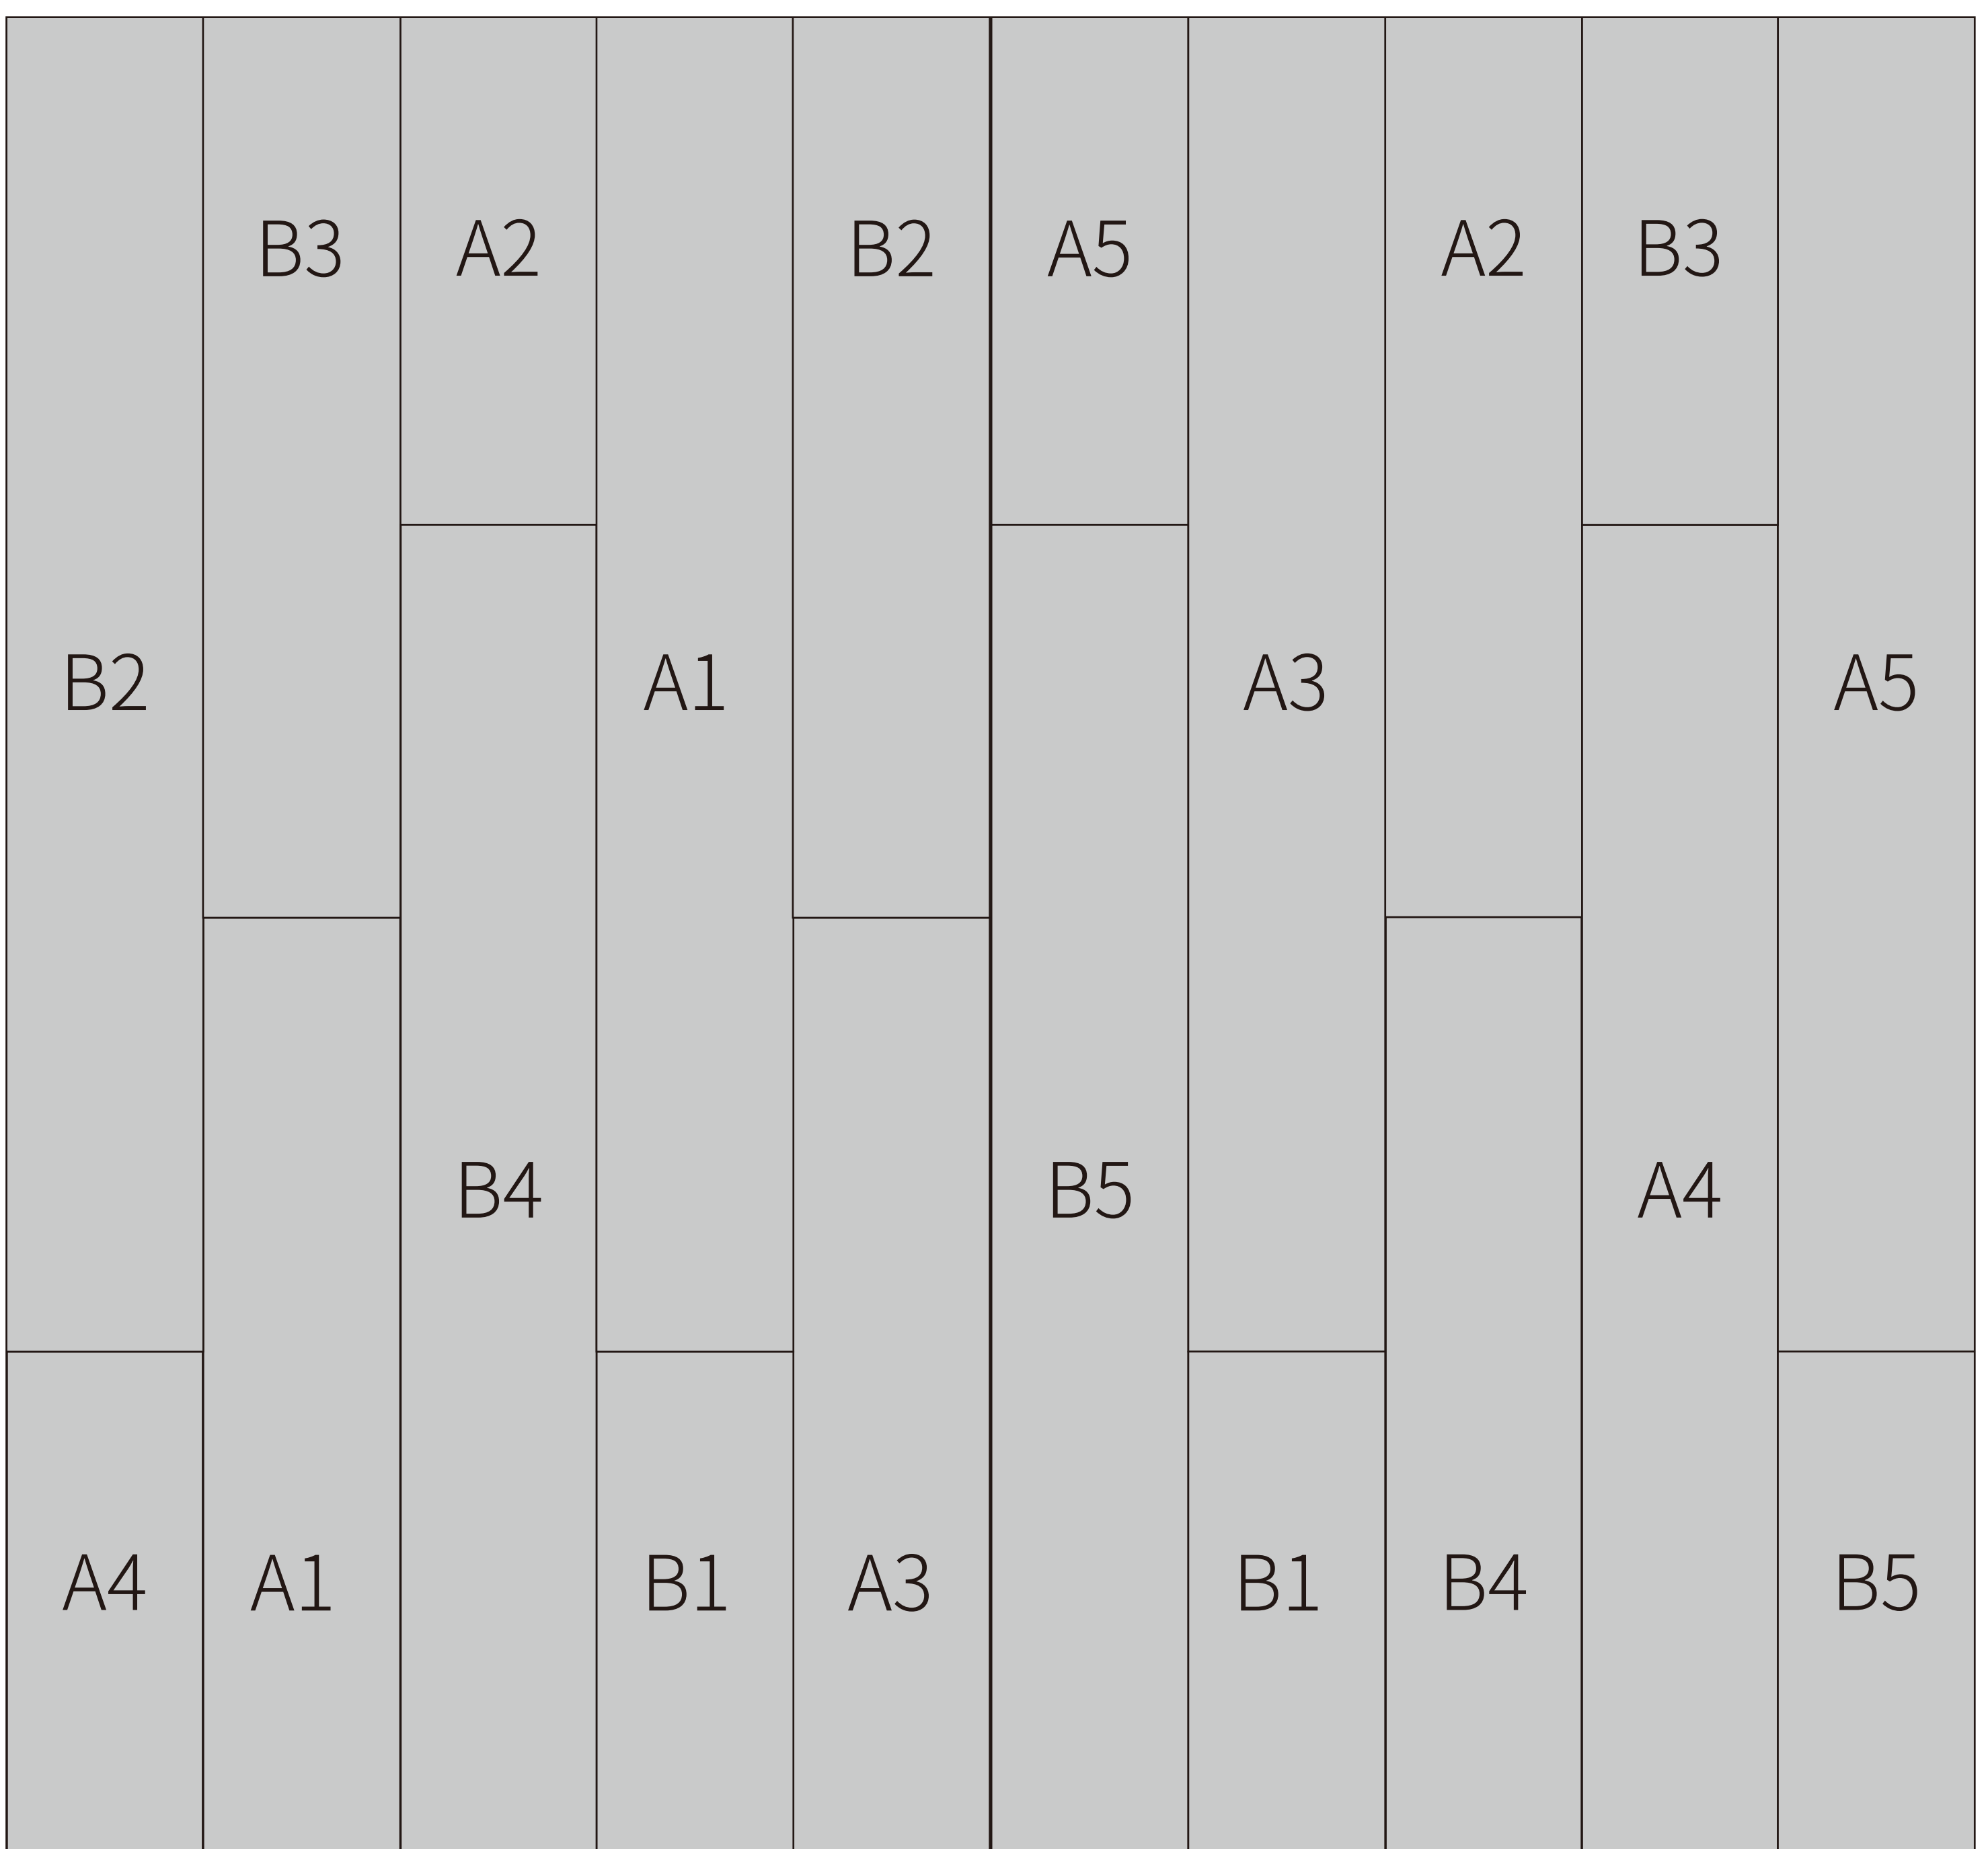

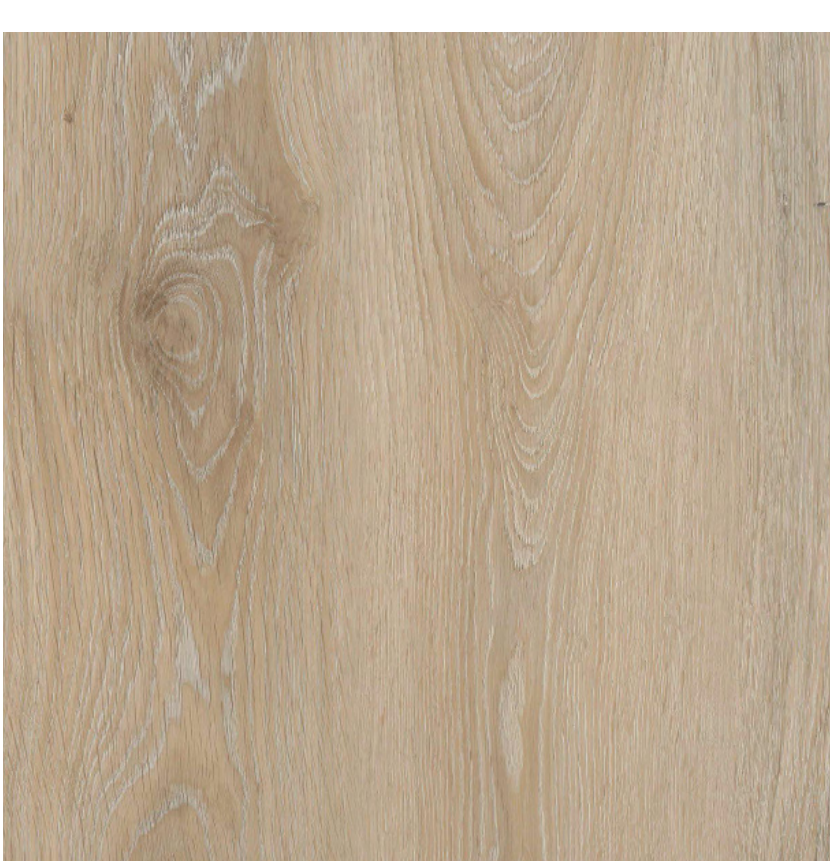

White thorn oak

NO.ZT33056

NO.ZT33055


Size: 984*1570mm

Flooring Size: 184*1524mm


Two different patterns to minimize color or pattern repeat problem. 10 pcs repeat makes your floors more natural.




ZT33055

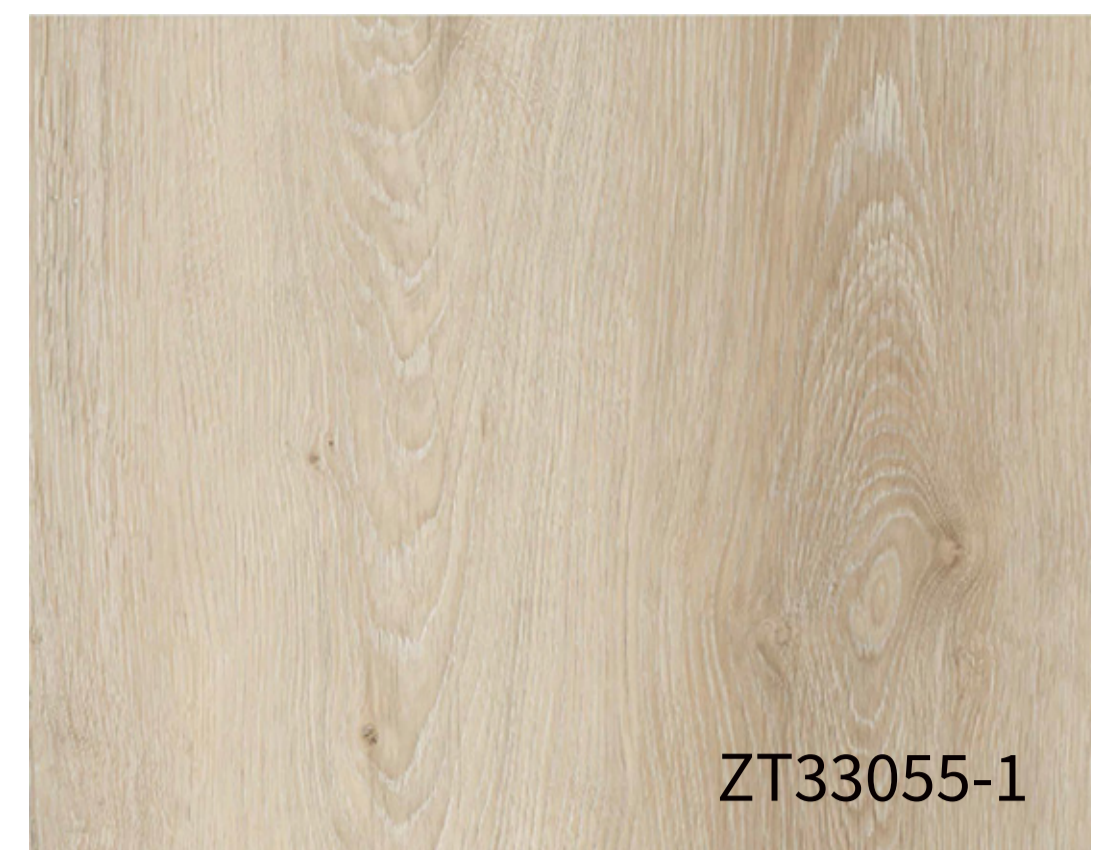

ZT33055-1

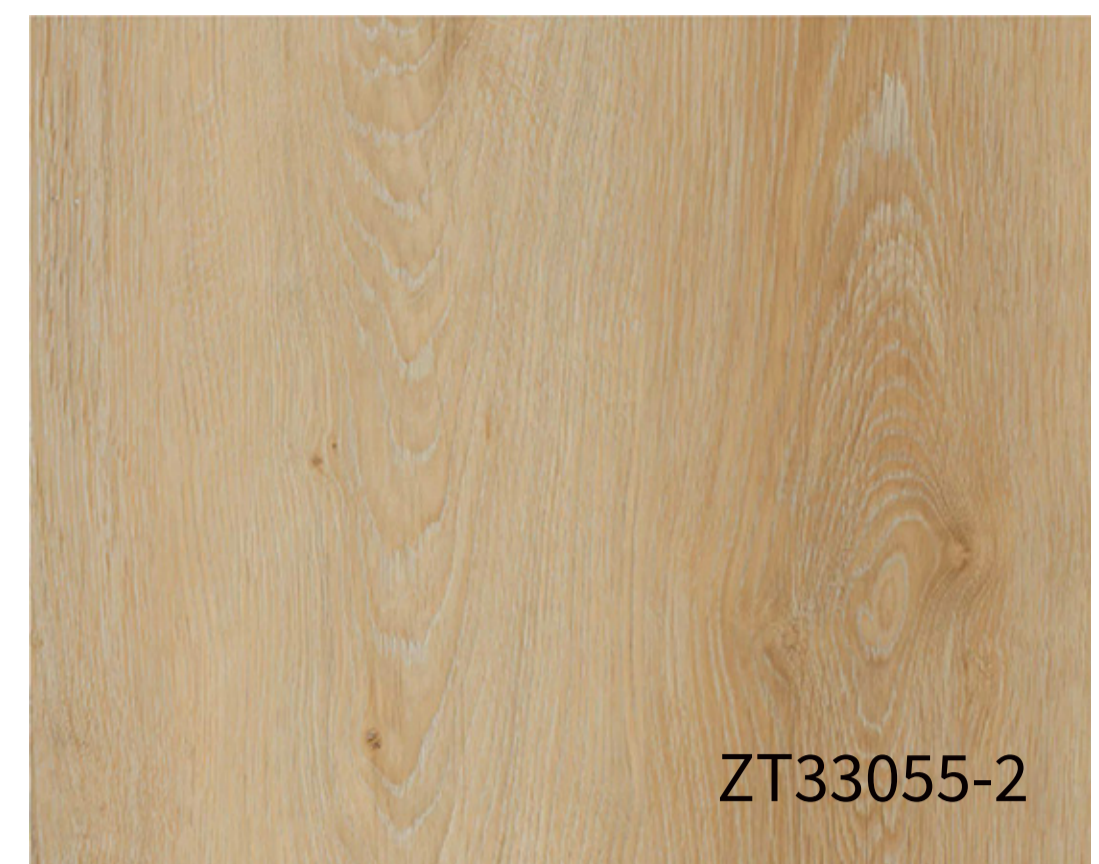

ZT33055-2

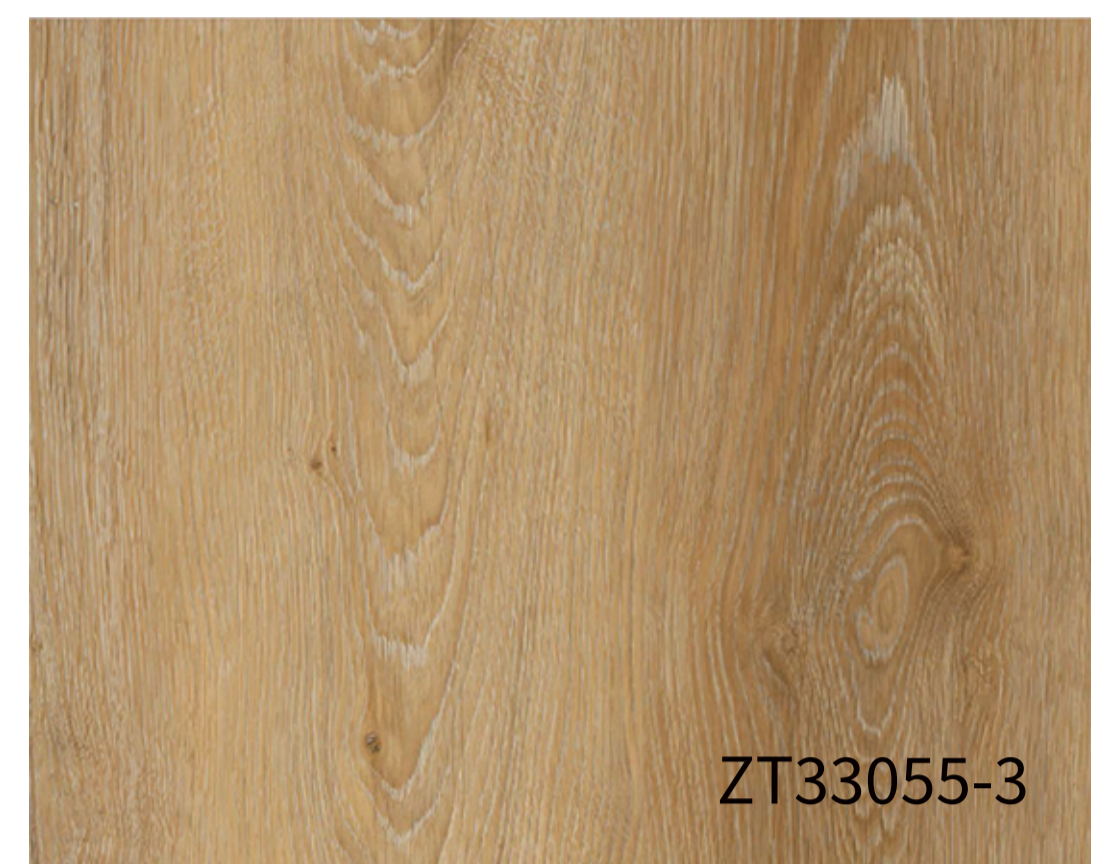

ZT33055-3




ZT33055-4




ZT33056




ZT33056-1

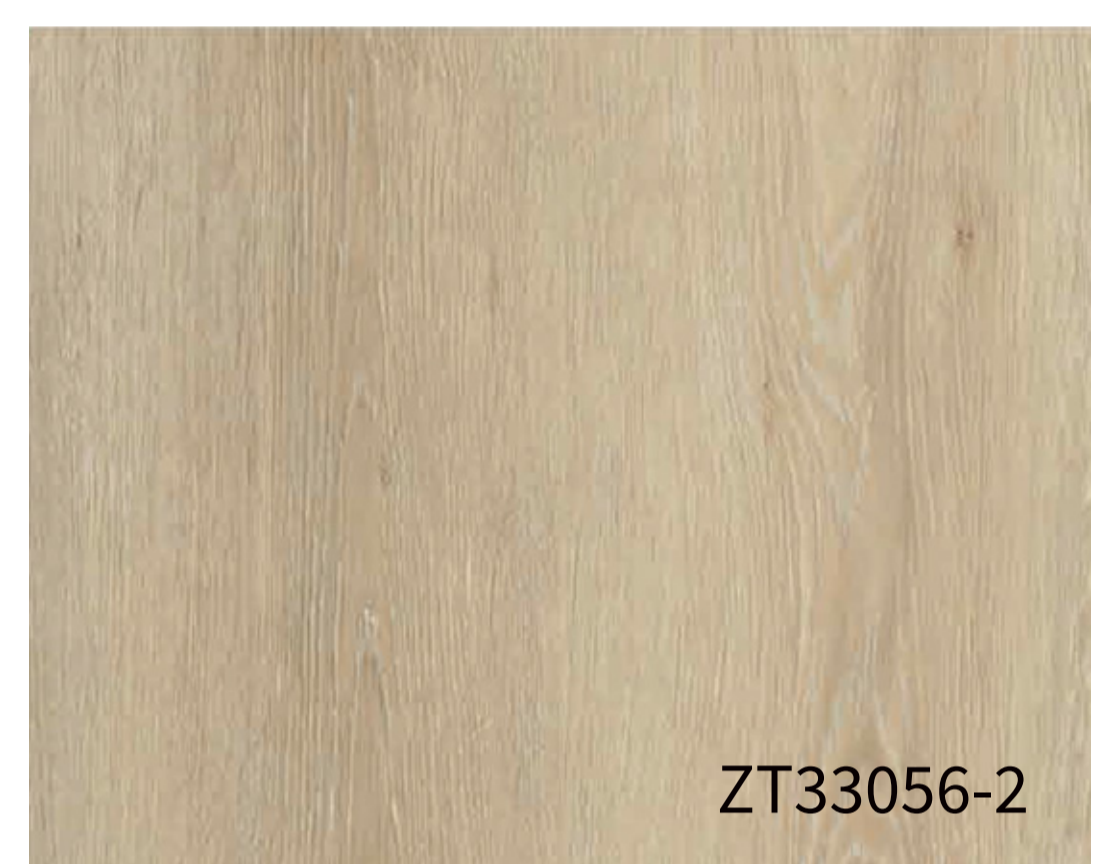

ZT33056-2

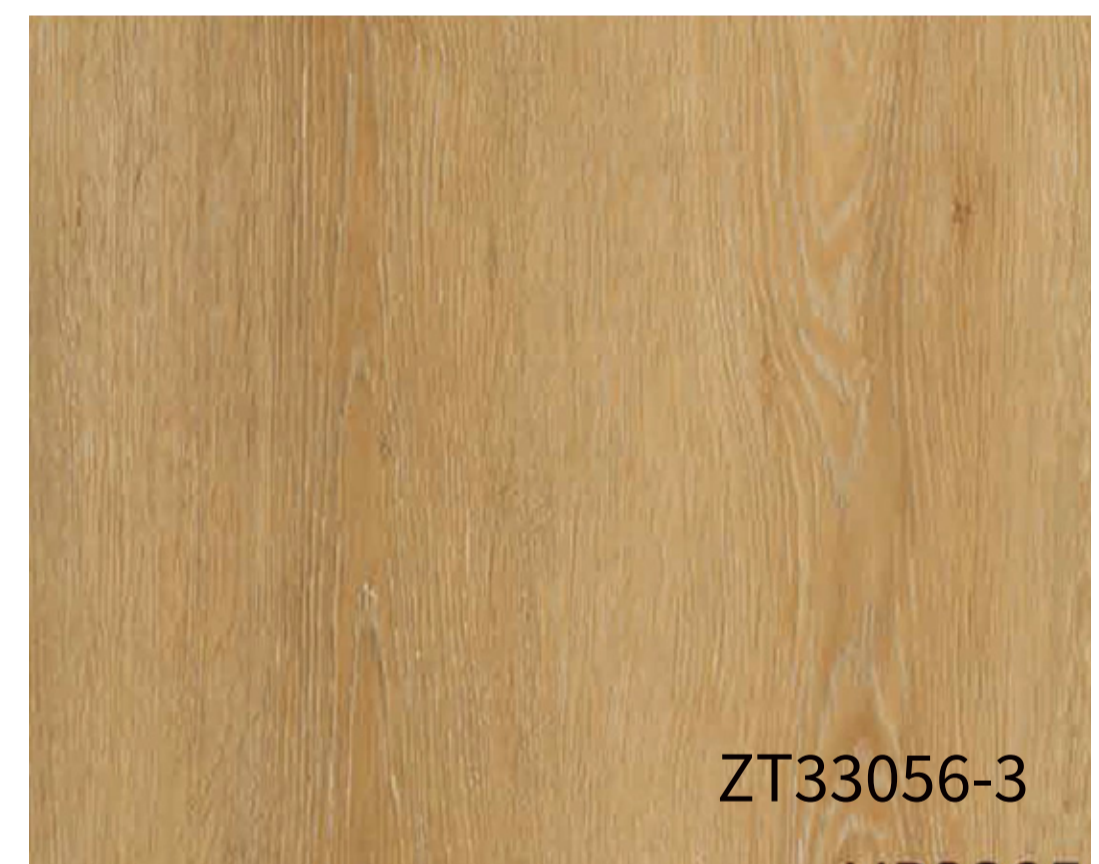

ZT33056-3

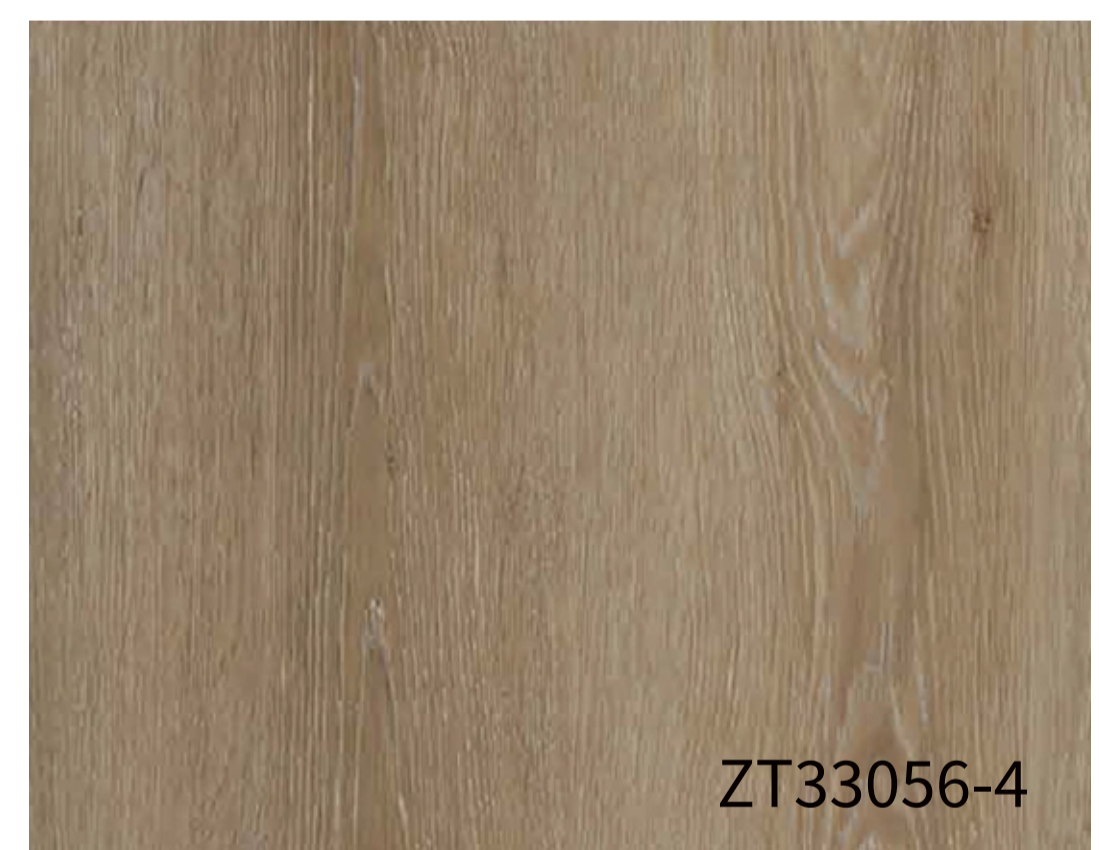


ZT33056-4






OAK-ABC SERIES FLOORING SCHEMATIC DIAGRAM


Three different patterns to minimize color or pattern repeat problem.
12 pcs repeat makes your floors more natural.

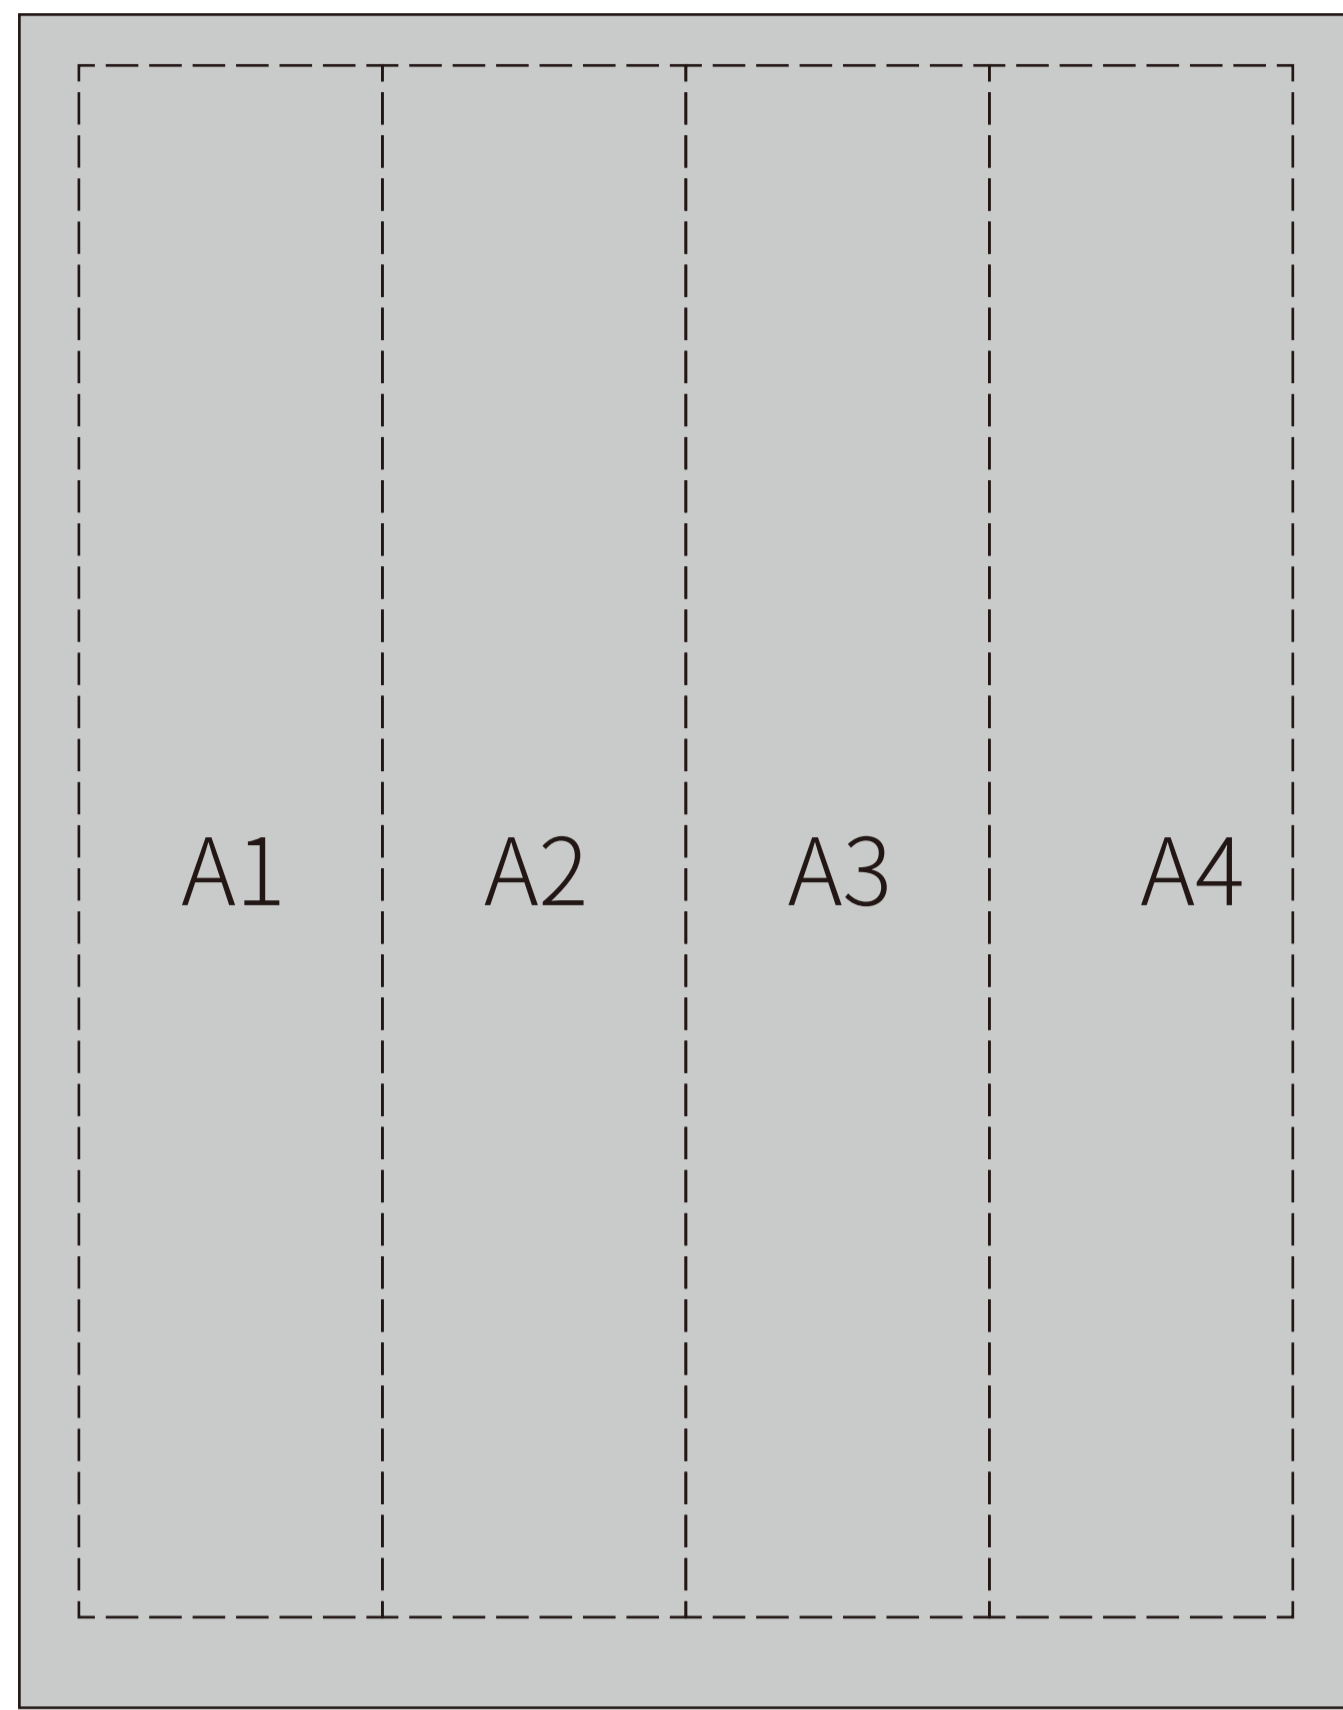


Floor A

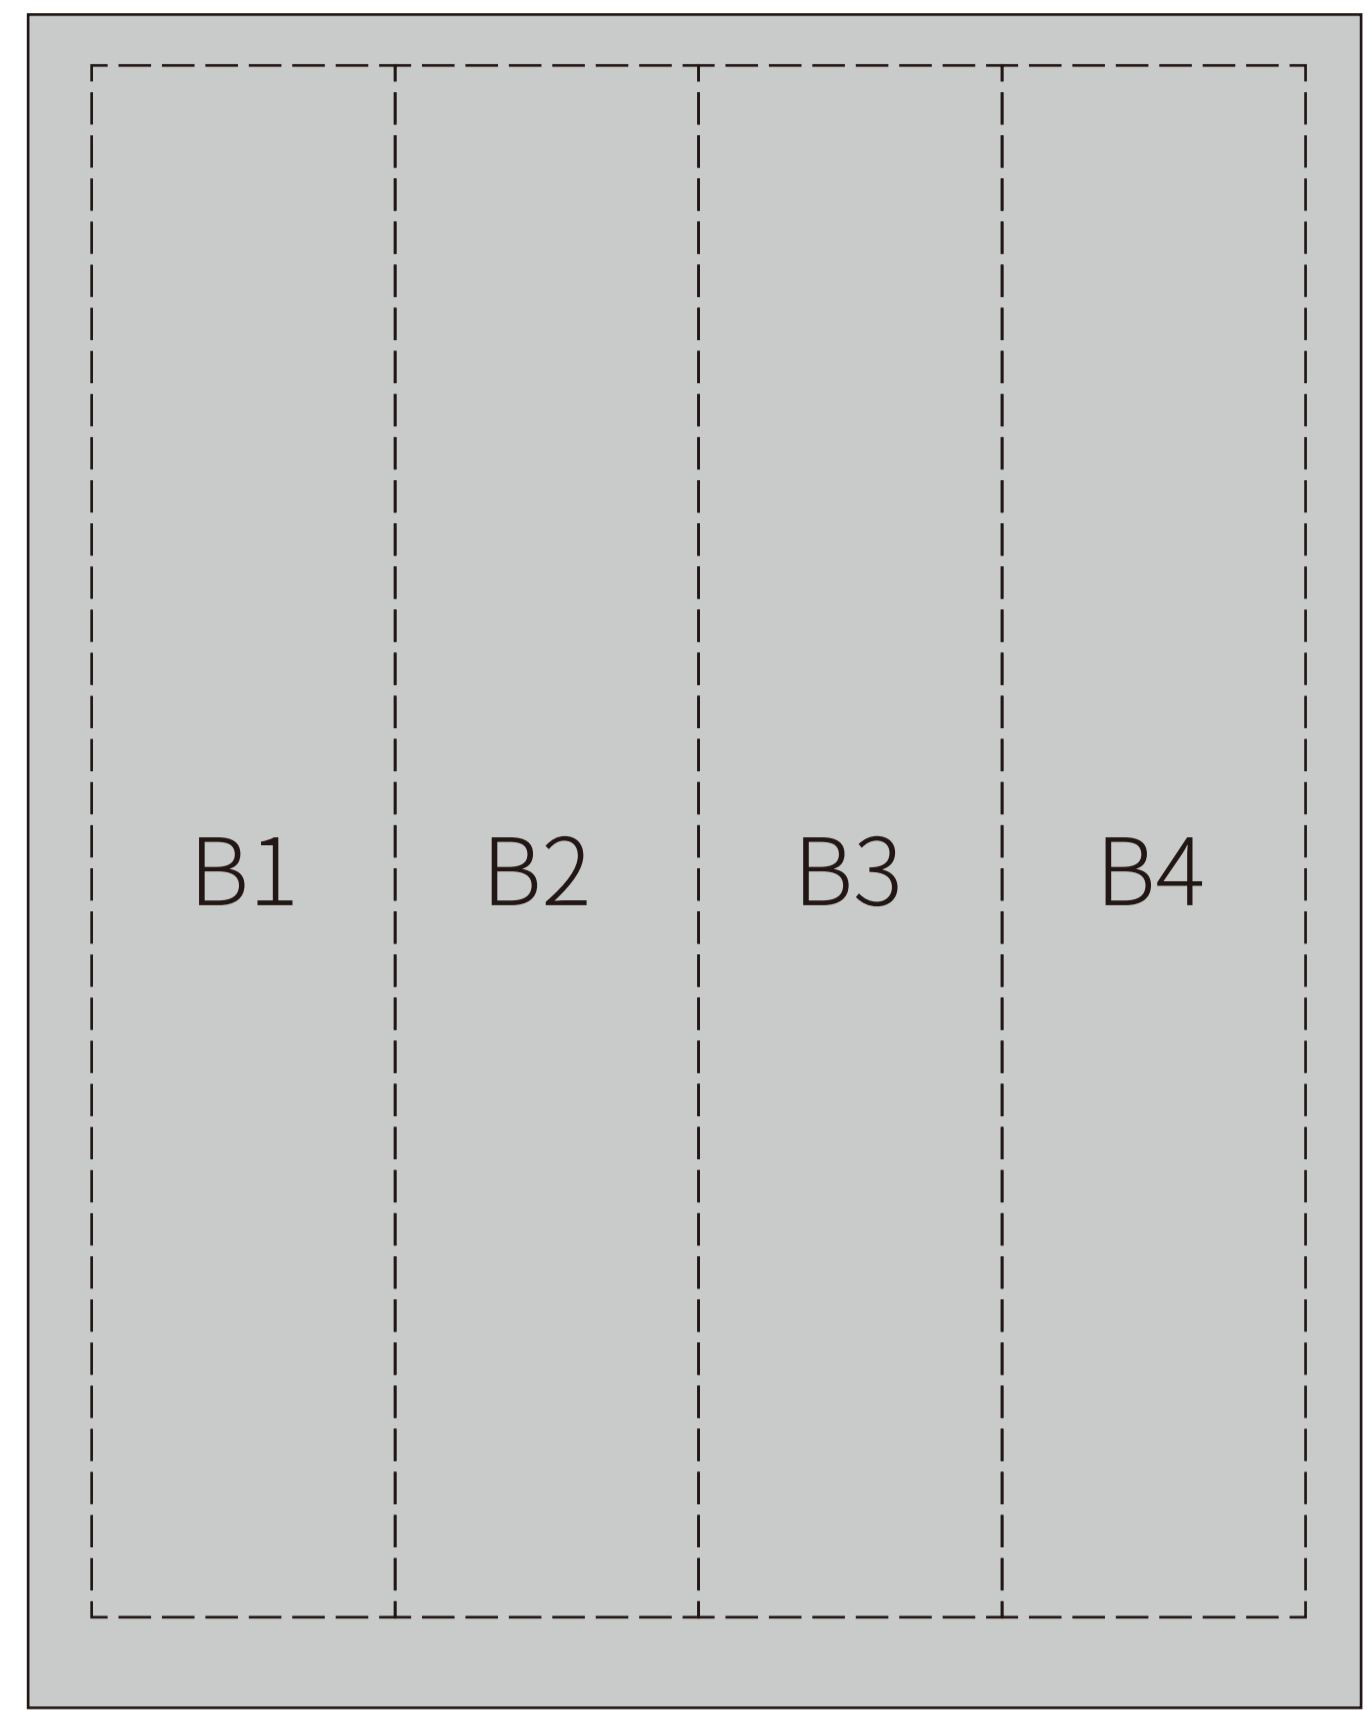

Floor B

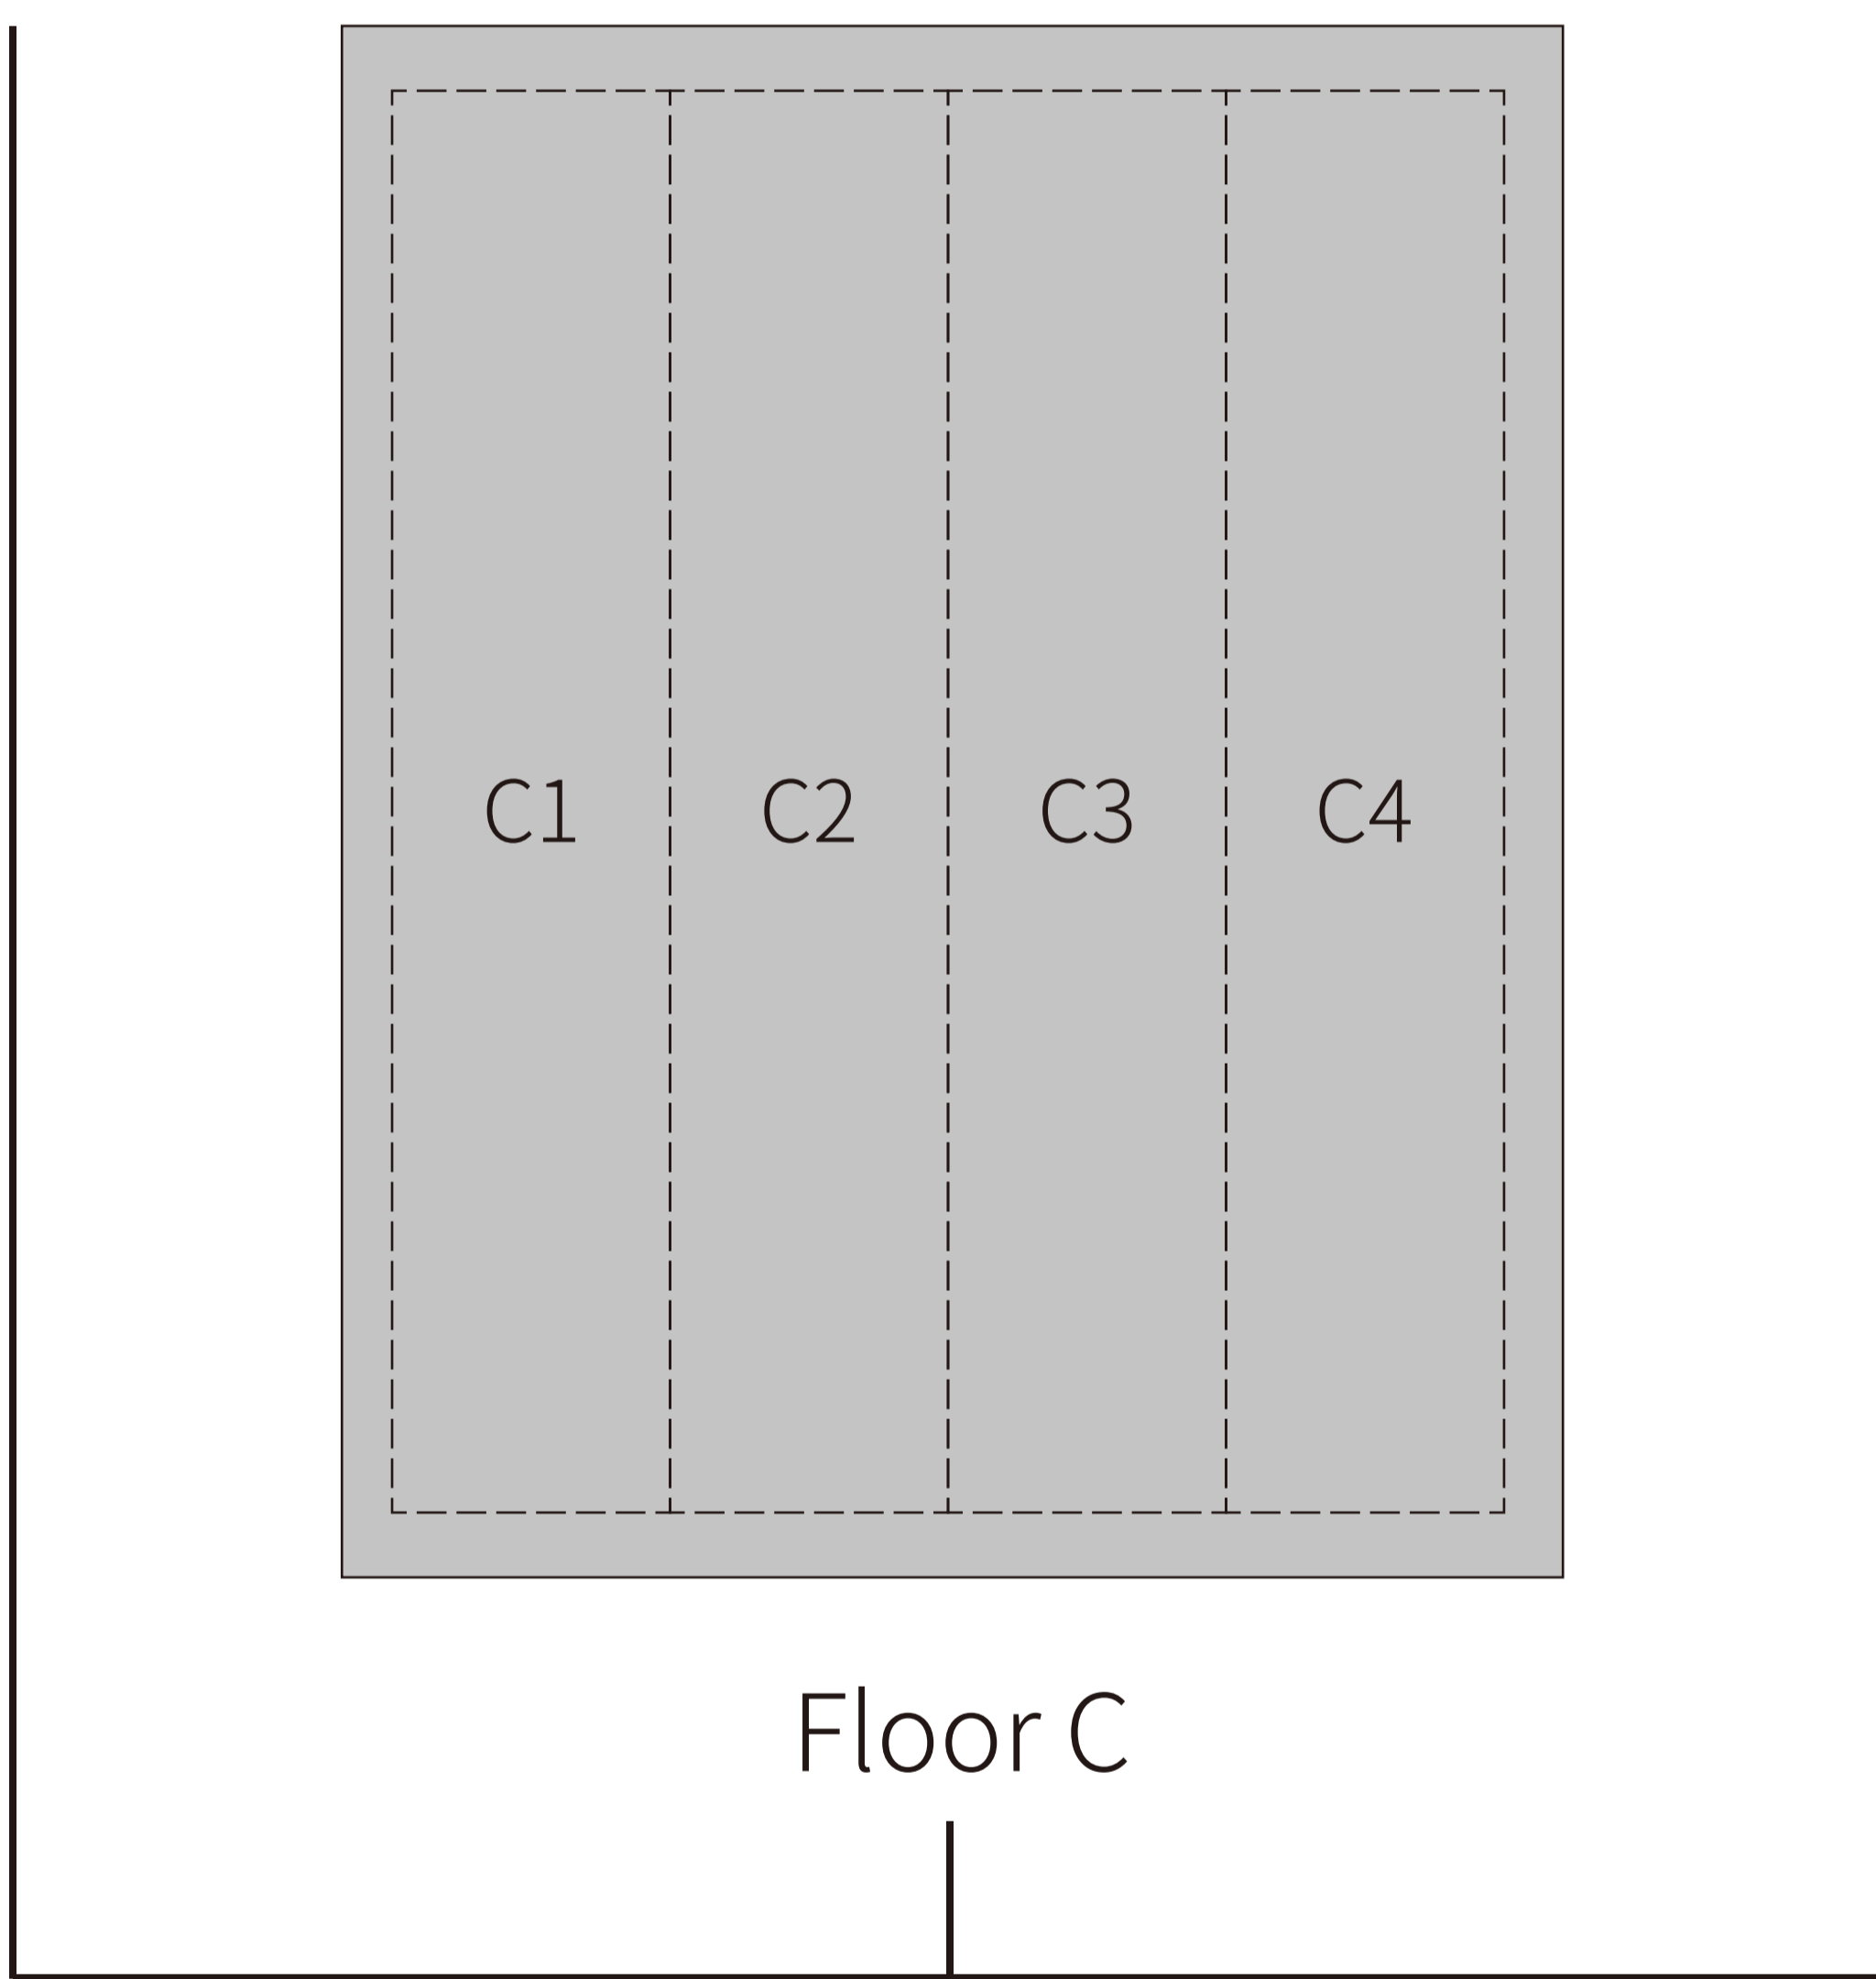

Floor C

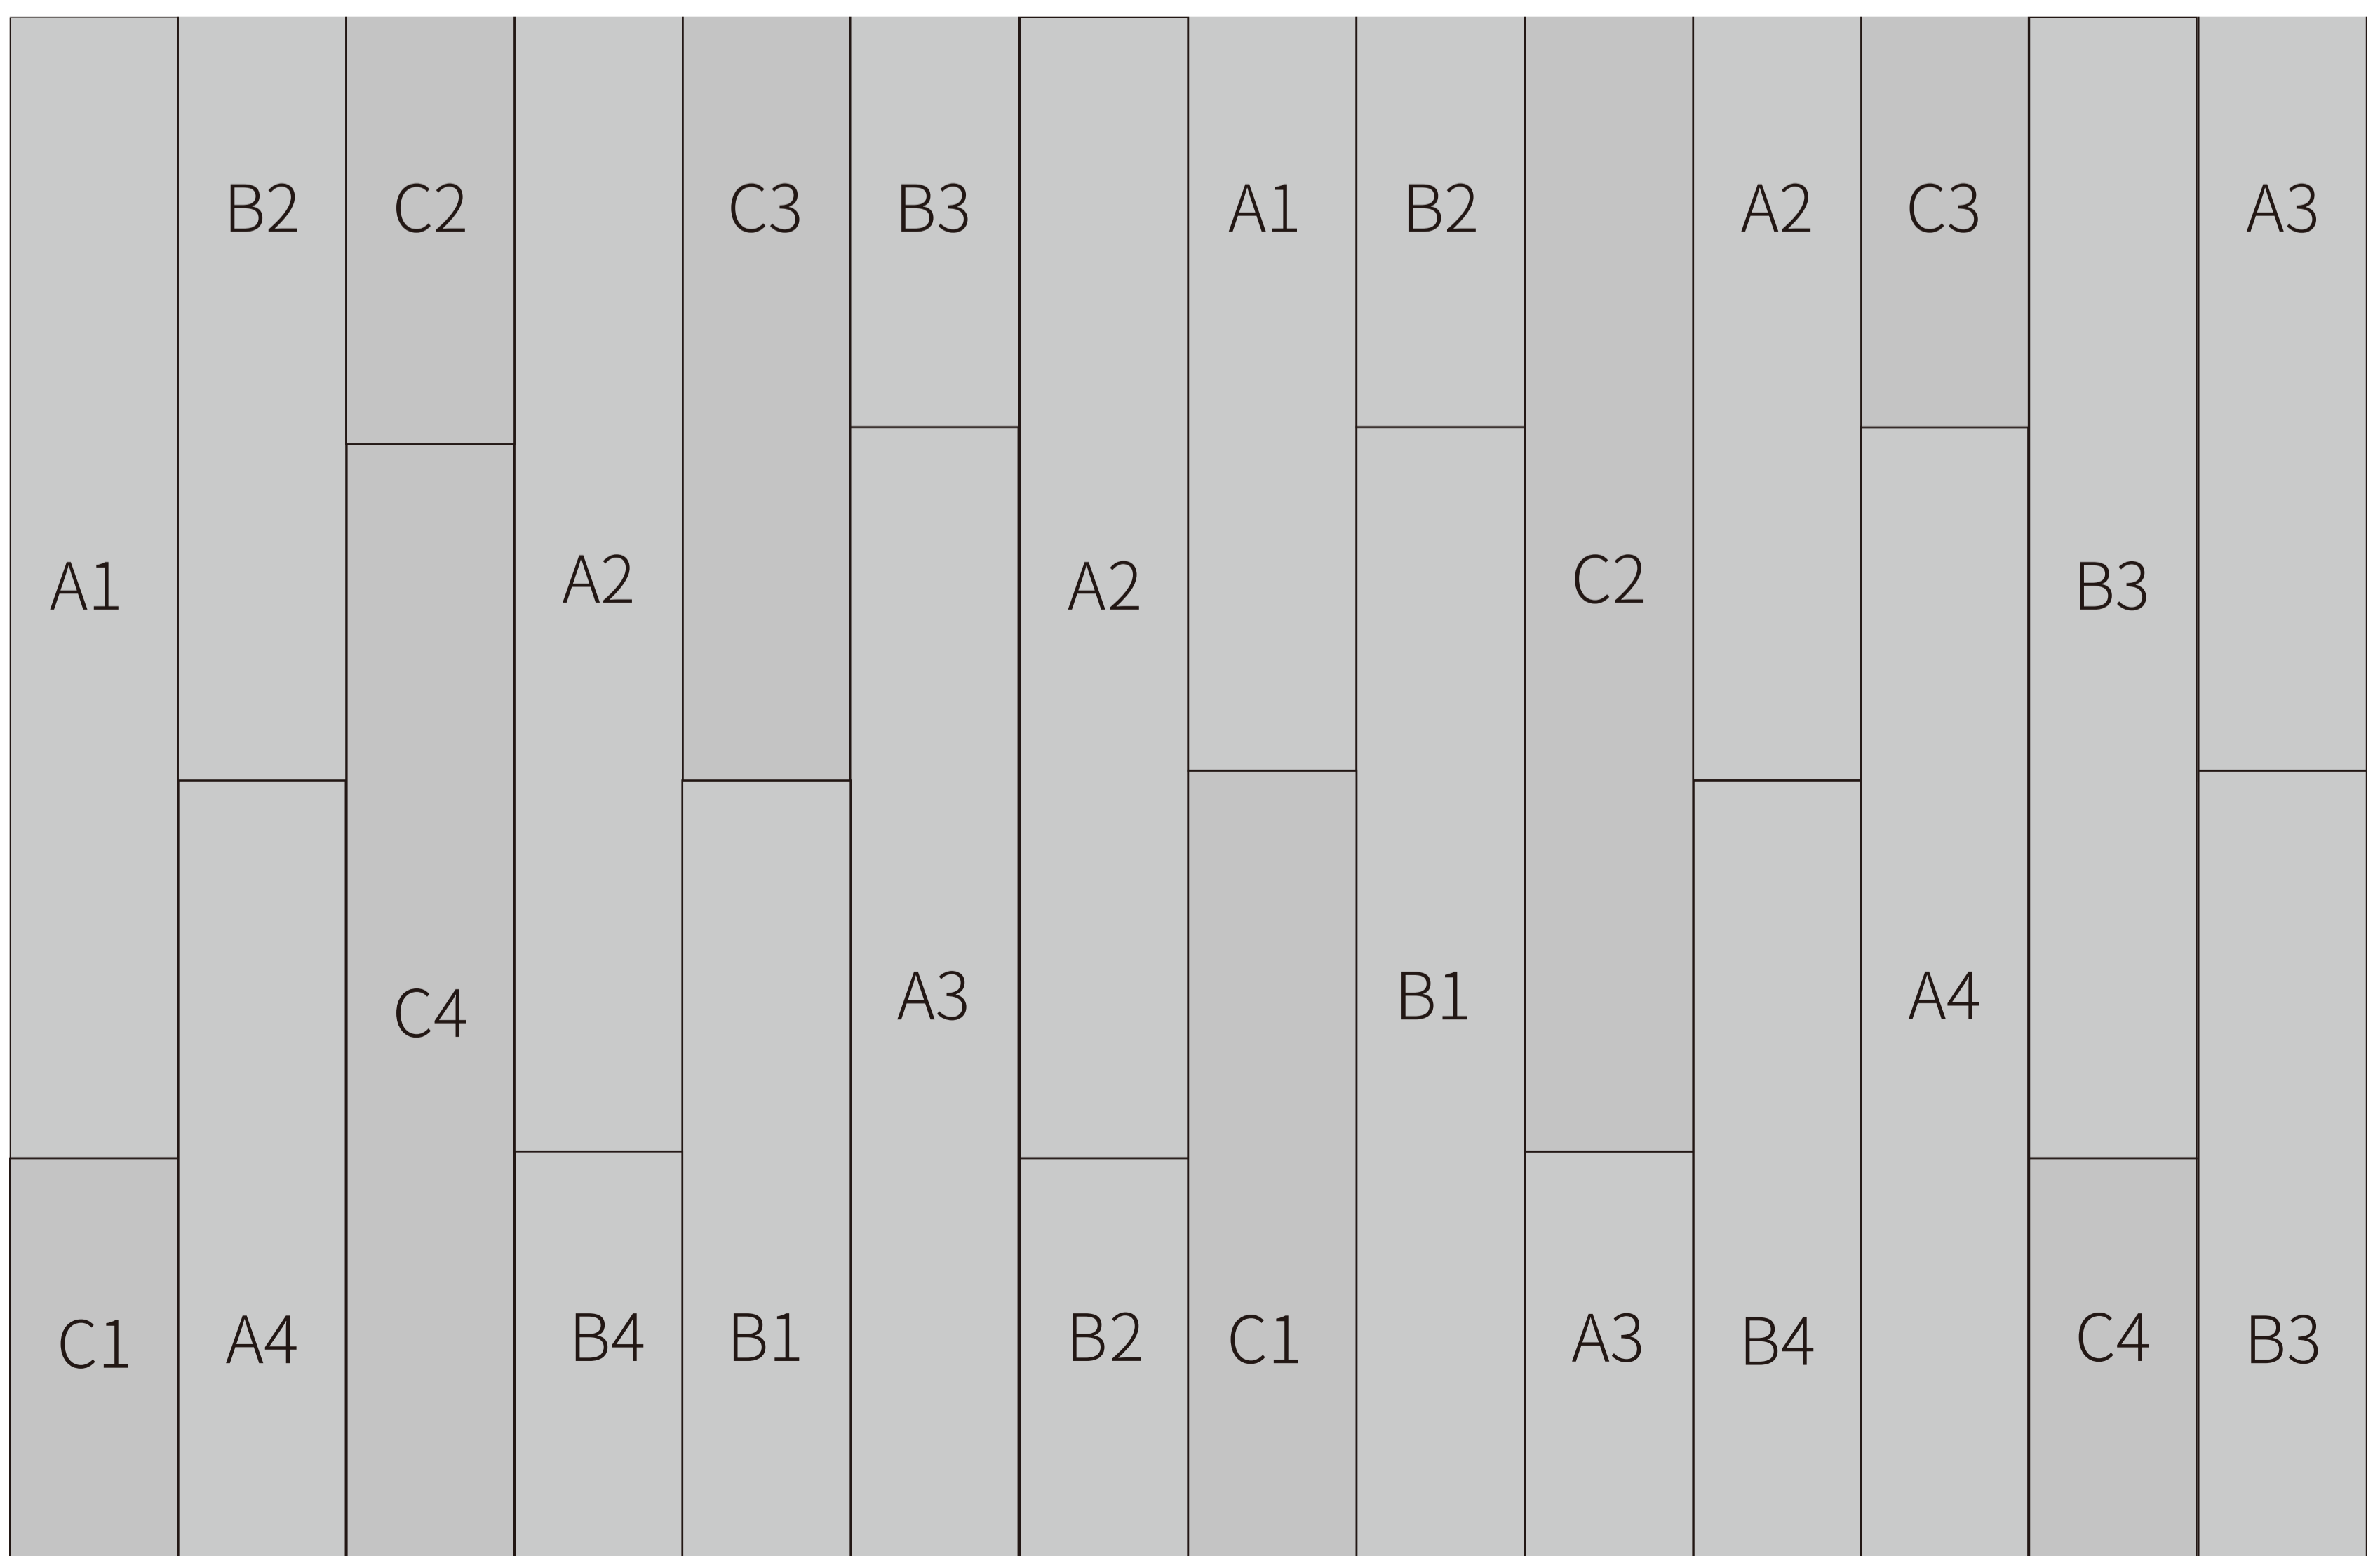



Yiran Oak





Size: 984*1570mm
Flooring Size: 228*1524mm

Three different patterns to minimize color or pattern repeat problem. 12 pcs repeat makes your floors more natural.

NO.ZT33003

NO.ZT33004

NO.ZT33005

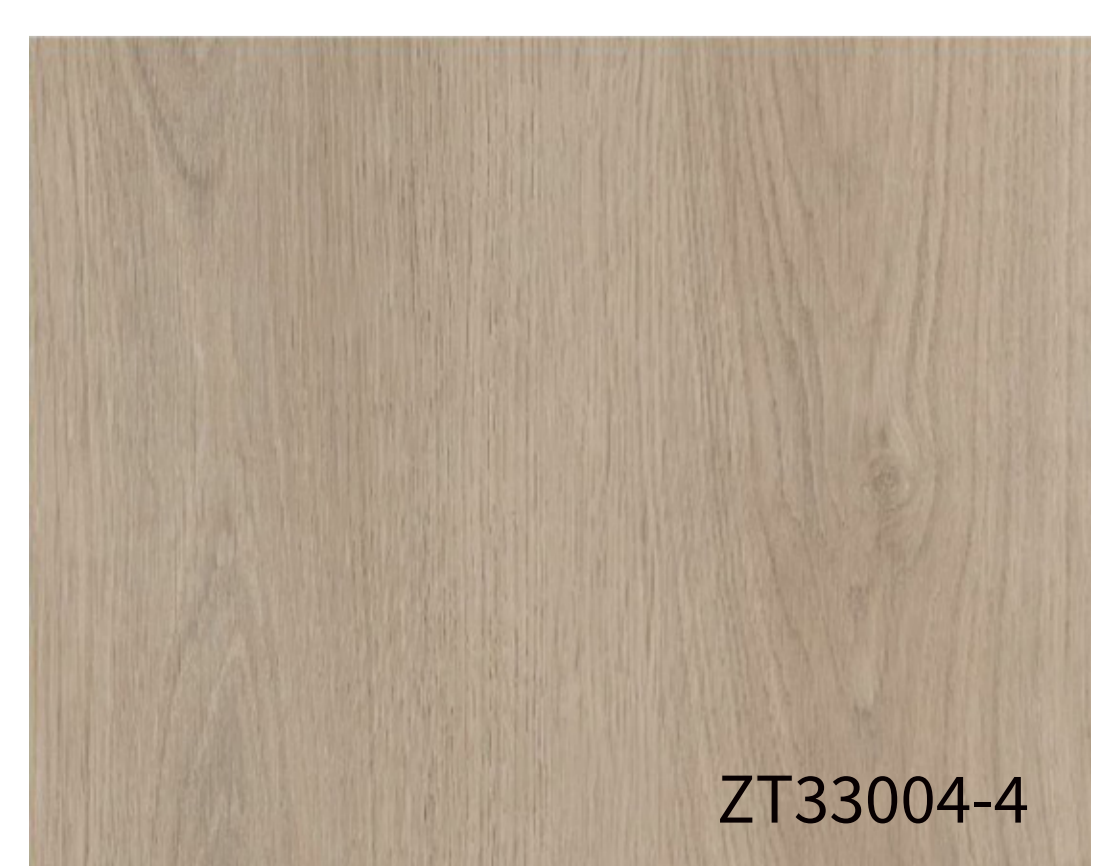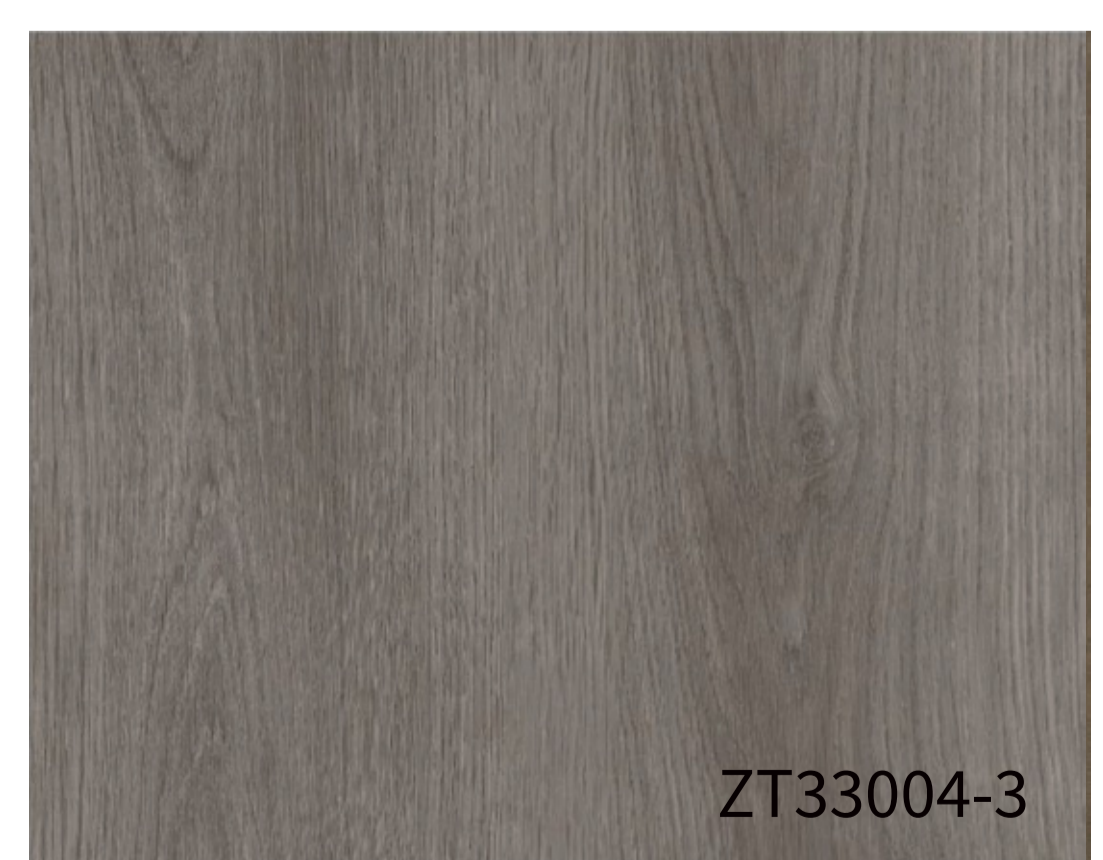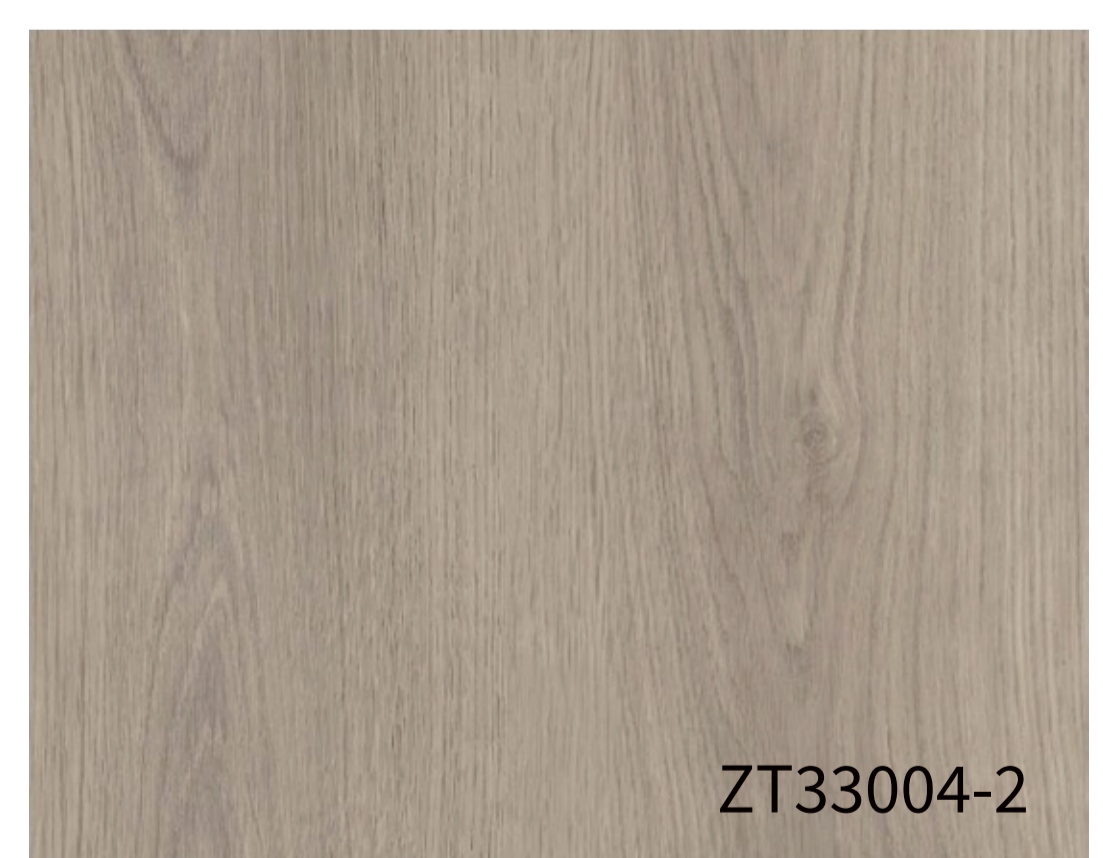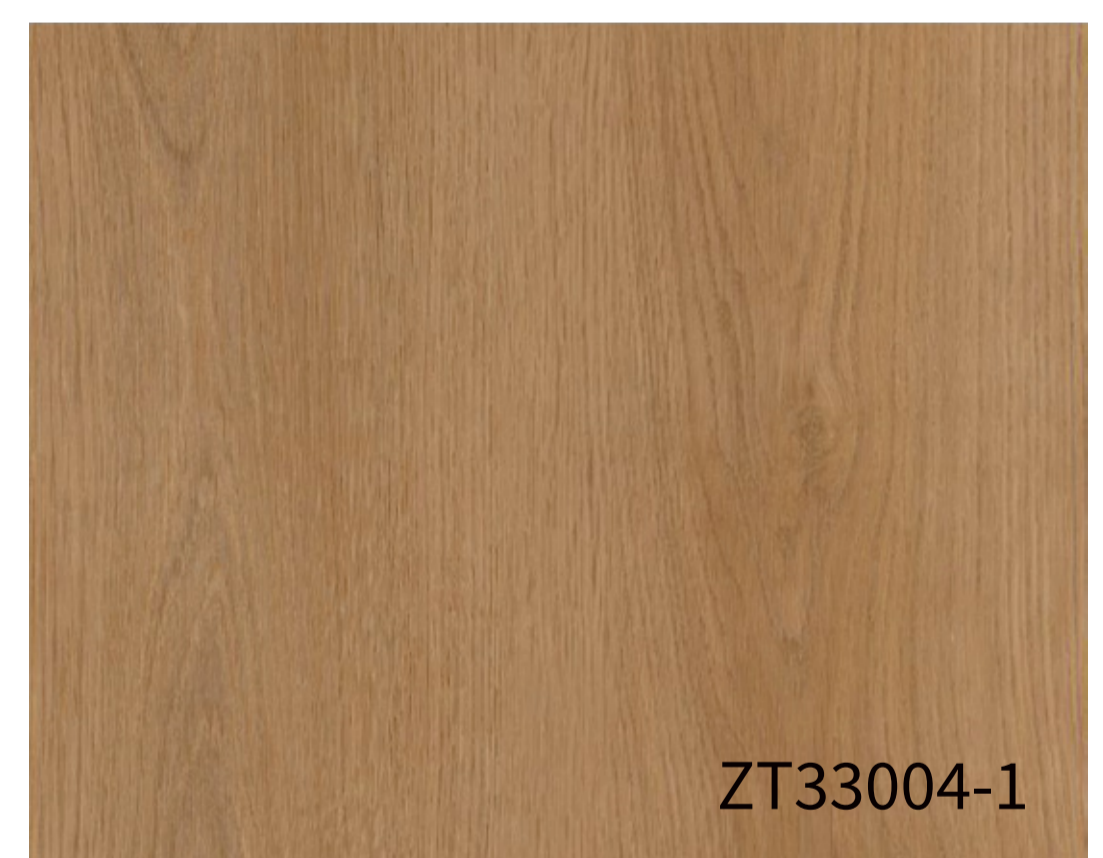



ZT33005



ZT33005-1




ZT33005-2



ZT33005-3



ZT33005-4

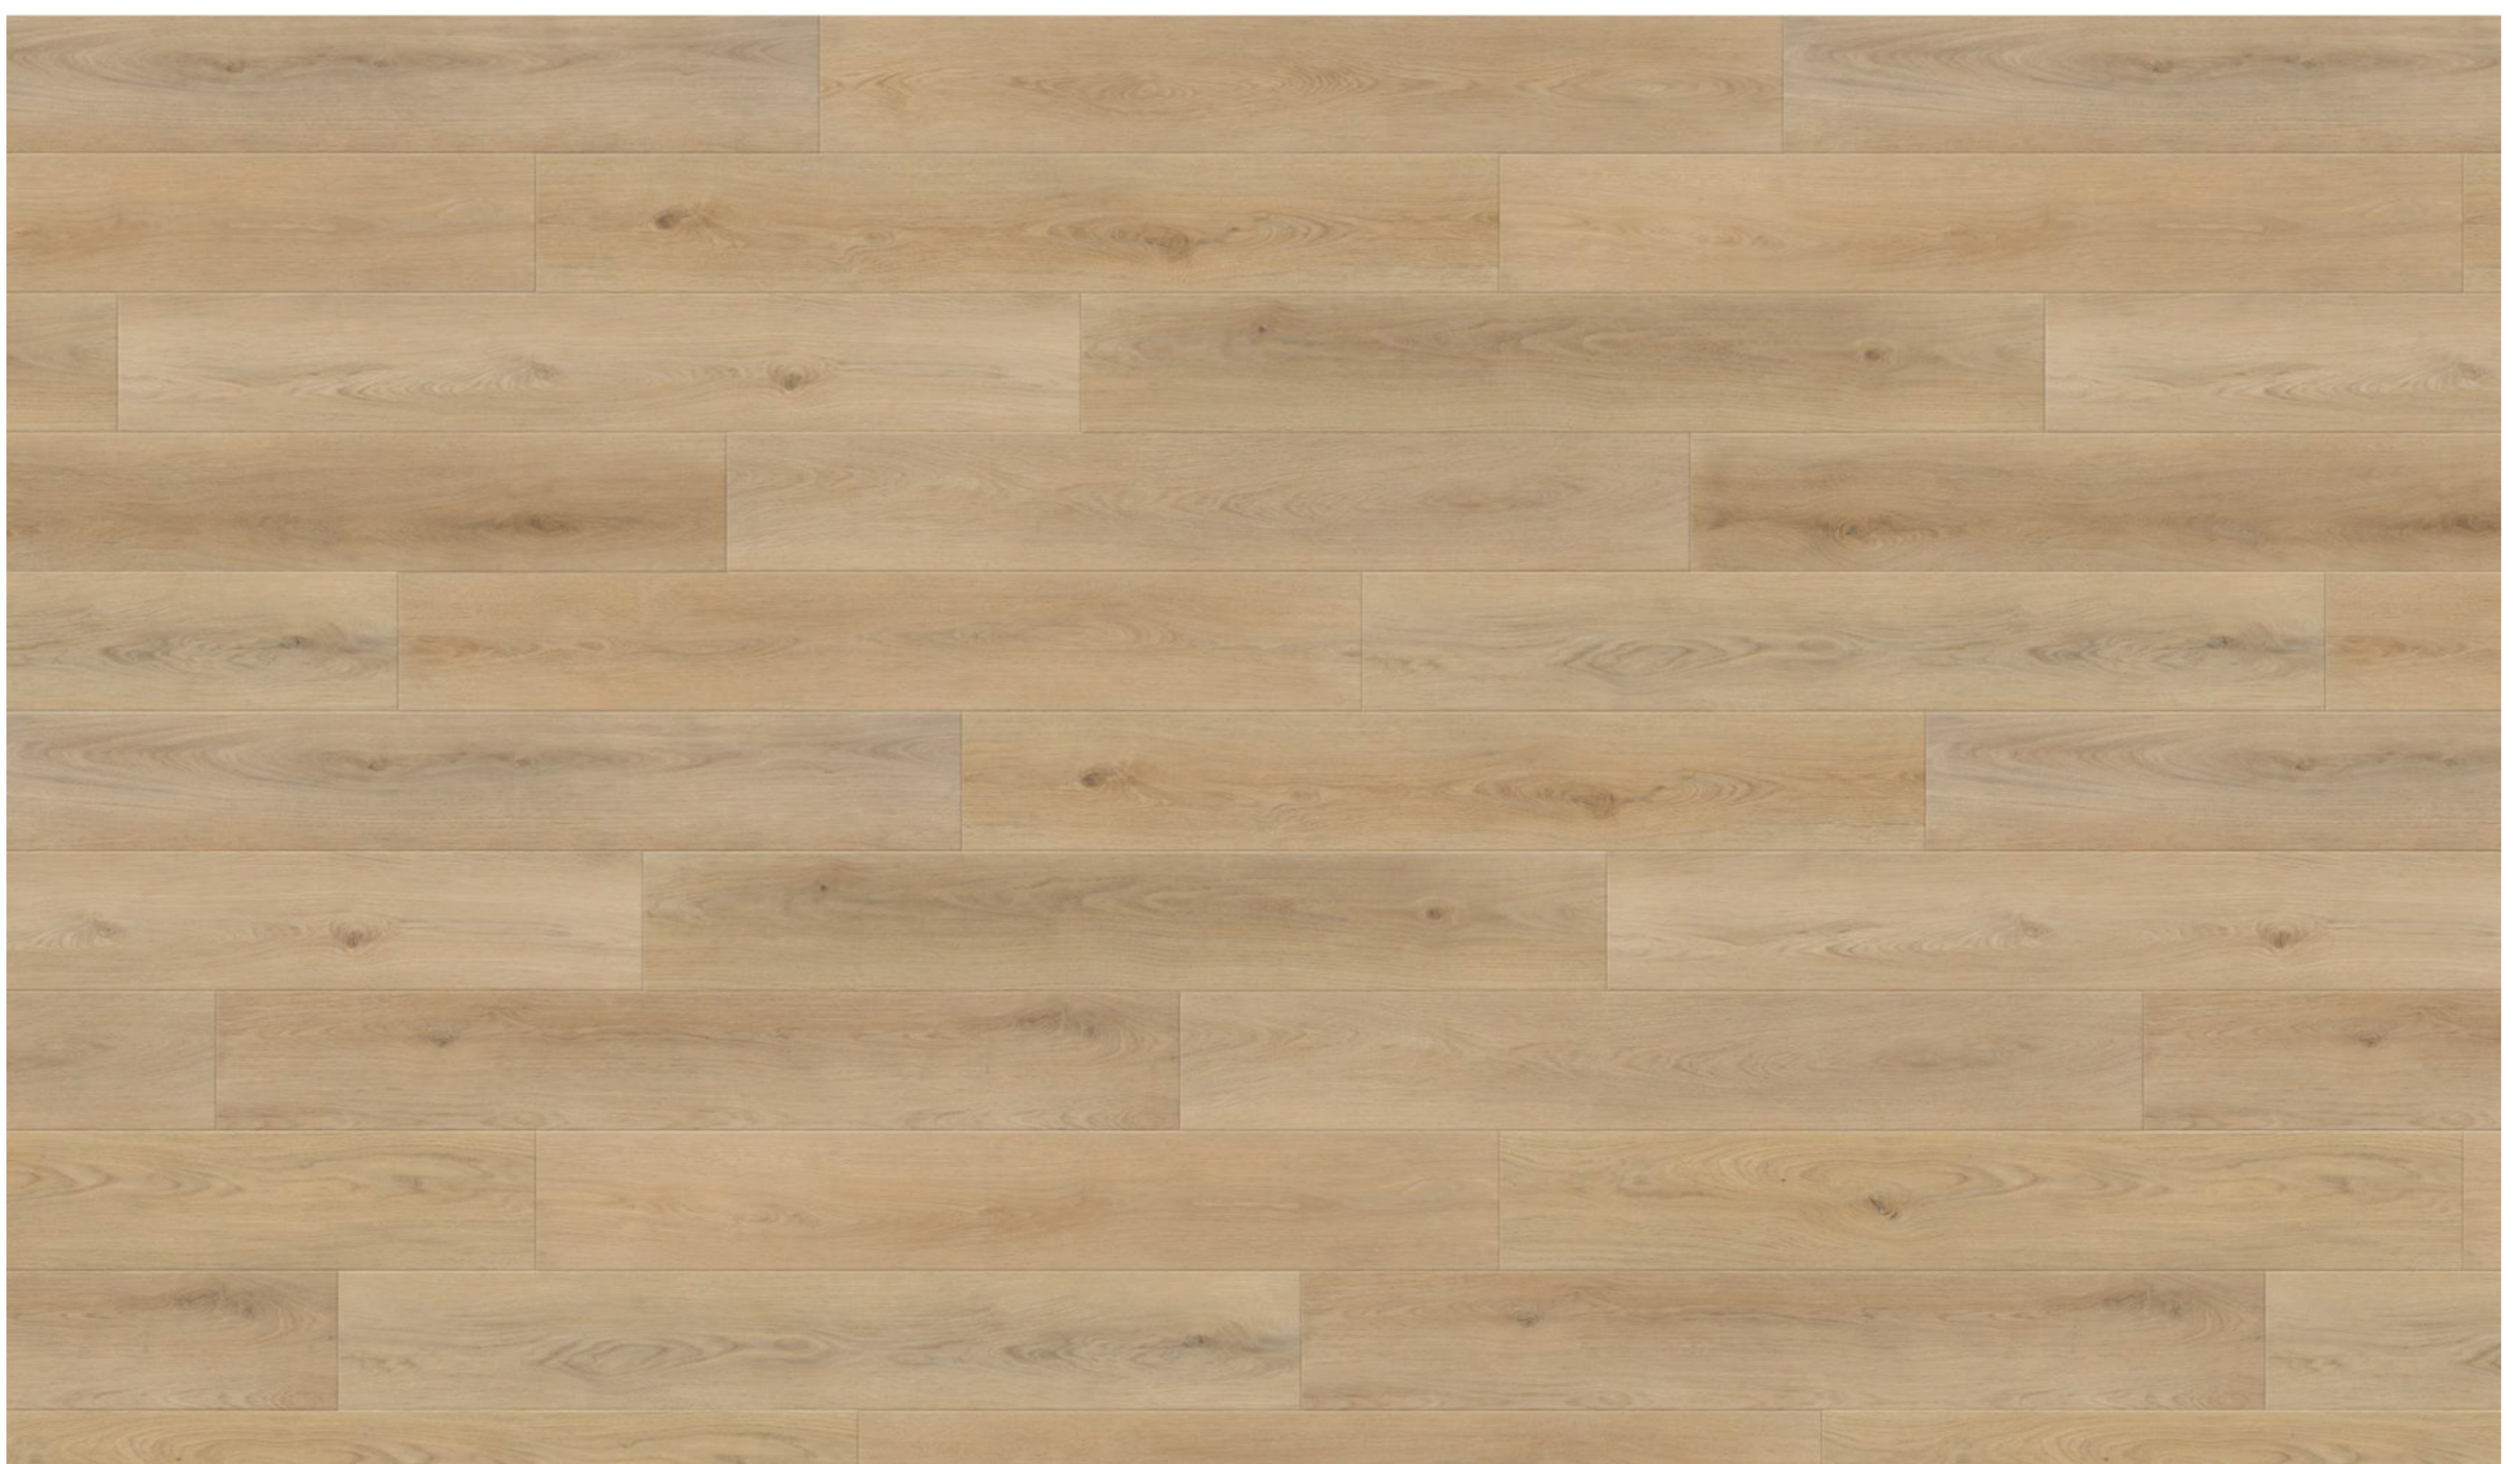



AB SERIES PACKAGING

Two different patterns to minimize color or pattern repeat problem.

1520 x 228 x 4/0.3mm
3.4456

1520 x 228 x 4/0.3mm
3.4456

SPC FLOORING
OAK AB-SERIES
Two different patterns to minimize color or pattern repeat problem.

1520 x 228 x 4/0.3mm
3.4456

1520 x 228 x 4/0.3mm
3.4456

Preparations

The surface of the floor must be clean, dry and stable.
Any polish, dirt, paint, etc must be removed from the job surface.
The floor surface must be flat and leveled with a scraper and putty knife.
Maintain the room temperature above 15°C (59°F) before installation.
Check that the doors can still open and close after the floor has been installed (minimum + 1 cm (3/8"))

Site Condition:

- Existing floor surface level must be within acceptable level with a tolerance level of 1mm only. Otherwise, this will cause high low between vinyl planks and waviness effect after completion.
- It is advisable to do self-leveling cement before lay vinyl plank for uneven floor.
- For vinyl glue-on, floor and wall (if any) moisture must be within acceptable range. Otherwise, it is advisable to apply water proof liquid before self-leveling cement for floor and primer for wall.
- Uneven wall surface will cause a gap between vinyl and wall, it is advisable to skim coat the gap when floor completed. This can be substituted with wall skirting.
- If floor skirting is excluded, it is advisable for vinyl plank to be installed first before any wall panel/partition/furniture lay to avoid visible gap between wall and vinyl plank. In this installation, floor cover is compulsory to protect the completed vinyl flooring.
- If floor skirting is included, it is advisable for vinyl plank to be installed last to avoid damage to the vinyl flooring.

- Start at a corner. Place first plank with tongue side facing wall. Use spacers to maintain an expansion space of 2-3 mm between wall and flooring.
- Insert 2nd plank's end tongue to 1st plank's end groove at an angle of 15° to 20°. The plank will click into place when lowered. Line up edges carefully. Planks should be flat to the floor.
- For the last plank of a row, flip a full plank to its under side and place beside the row. Measure and mark the required length. Use a ruler and utility knife to score the plank and snap off. Insert as previous diagram.
- Begin next row with the last cut off piece from the previous row to stagger the pattern.
- To start second row, assemble your entire row on the subfloor before attaching it to the first row. To attach, tilt and push the side tongue into the side groove of the first row at an angle of 15° to 20°. Lower and click into place. Using the edges up carefully. Continue laying remaining planks in this manner.
- To fit the final row, lay a plank upside down on the flooring as per diagram with the tongue side close to the wall. Take another plank and place it right on top of the previous row and use it as a ruler. Don't forget to allow room for spacers. Cut the plank and attach into position.
- Heating vents require expansion room. First, cut plank to the correct length. Place the cut plank at its actual position and use a ruler to measure the areas to be cut out and mark them. Cut out the marked points allowing the necessary expansion distance.
- The gap between the bottom of a door and the vinyl flooring should be 1 cm height. To trim door frames, turn a plank upside down. Place it next to the door frame as per diagram. Use a hand saw and cut away the necessary height so that the planks can slide easily underneath the frame.

1520x228x4/0.3mm 10 pcs/box



ZETA

F L O O R S

INNOVATION - QUALITY - ENVIRONMENT
WWW.ZETA FLOORS.COM

For any information on zeta flooring,
please contact:

jeff@zetafloors.com

grace@zetafloors.com

0519 866661258